

Tanaka

RESERVDELSKATALOG

MOTORSÅG

ECS 300


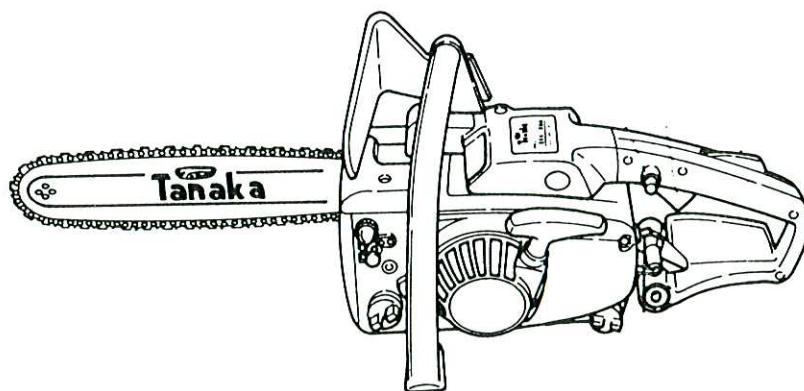



FIG. 1 MOTOR

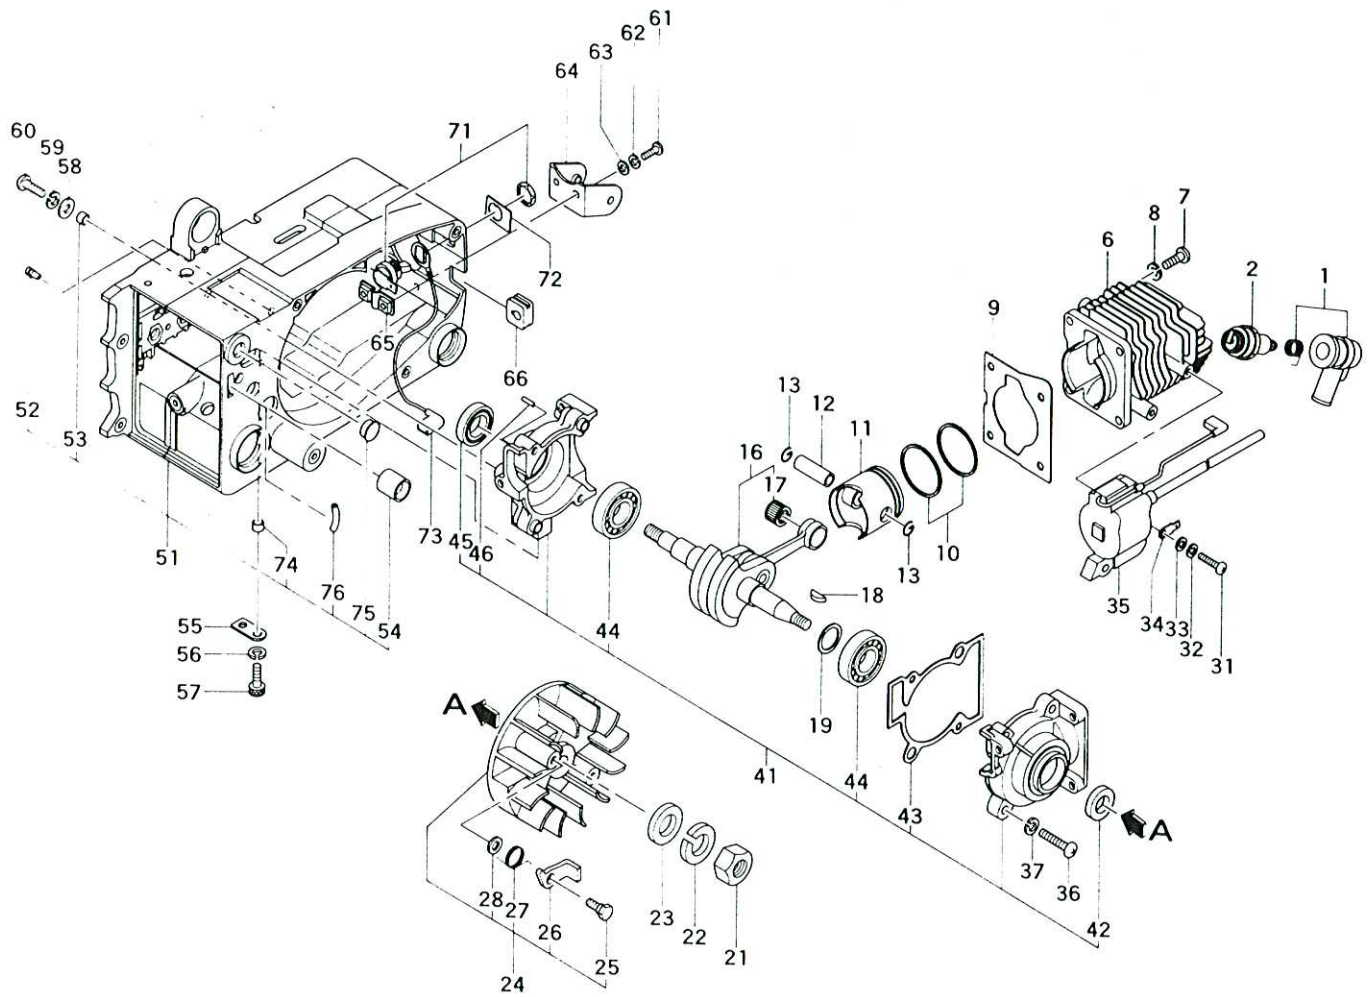

3302


ART NR	FIG NR	TILLV.NR	BENÄMNING	ANTAL
FIG. 1 MOTOR				
501 36 2200	1-001	157-11886-900	Tändstiftskåpa komplett	1
503 23 5008	1-002	018-01805-200	Tändstift	1
50136 2201	1-006	002-01700-200	Cylinder	1
0031	1-007	990-11050-181	Skruv 5 x 16	4
0253	1-008	992-10050-012	Fjäderbricka 5	4
2202	1-009	017-01700-200	Cylinderpackning	1
2203	1-010	041-01700-200	Kolring	2
2204	1-011	031-01700-200	Kolv	1
2205	1-012	037-01700-200	Kolvbult	1
4051	1-013	039-00000-201	Låsring	2
2206	1-016	046-01700-801	Vevaxel	1
4204	1-017	999-62091-325	Nållager F-910	1
2009	1-018	068-10100-200	Krysskil 3 x 13 x 4.5	1
4244	1-019	071-02007-200	Shimsbricka 0.05	V
4245	1-019	071-02007-210	Shimsbricka 0.10	V
4246	1-019	071-02007-220	Shimsbricka 0.15	V
4247	1-019	071-02007-230	Shimsbricka 0.20	V
1039	1-021	066-00000-200	Mutter	1
1442	1-022	992-10070-012	Fjäderbricka 7	1
0205	1-023	992-01070-011	Bricka 7	1
2207	1-024	155-20507-900	Magnethjul komplett	1
2027	1-025	793-10200-201	Spärrbult	2
2208	1-026	788-01700-200	Startspärr	2
2209	1-027	790-01700-200	Spärrfjäder	2
2210	1-028	182-01700-200	Special bricka	2
0019	1-031	990-11040-181	Skruv 4 x 18	2
0252	1-032	992-10040-012	Fjäderbricka 4	2
0202	1-033	992-00040-011	Bricka 4	2
2211	1-034	205-01700-200	Kontaktbleck	1

FIG. 1 MOTOR

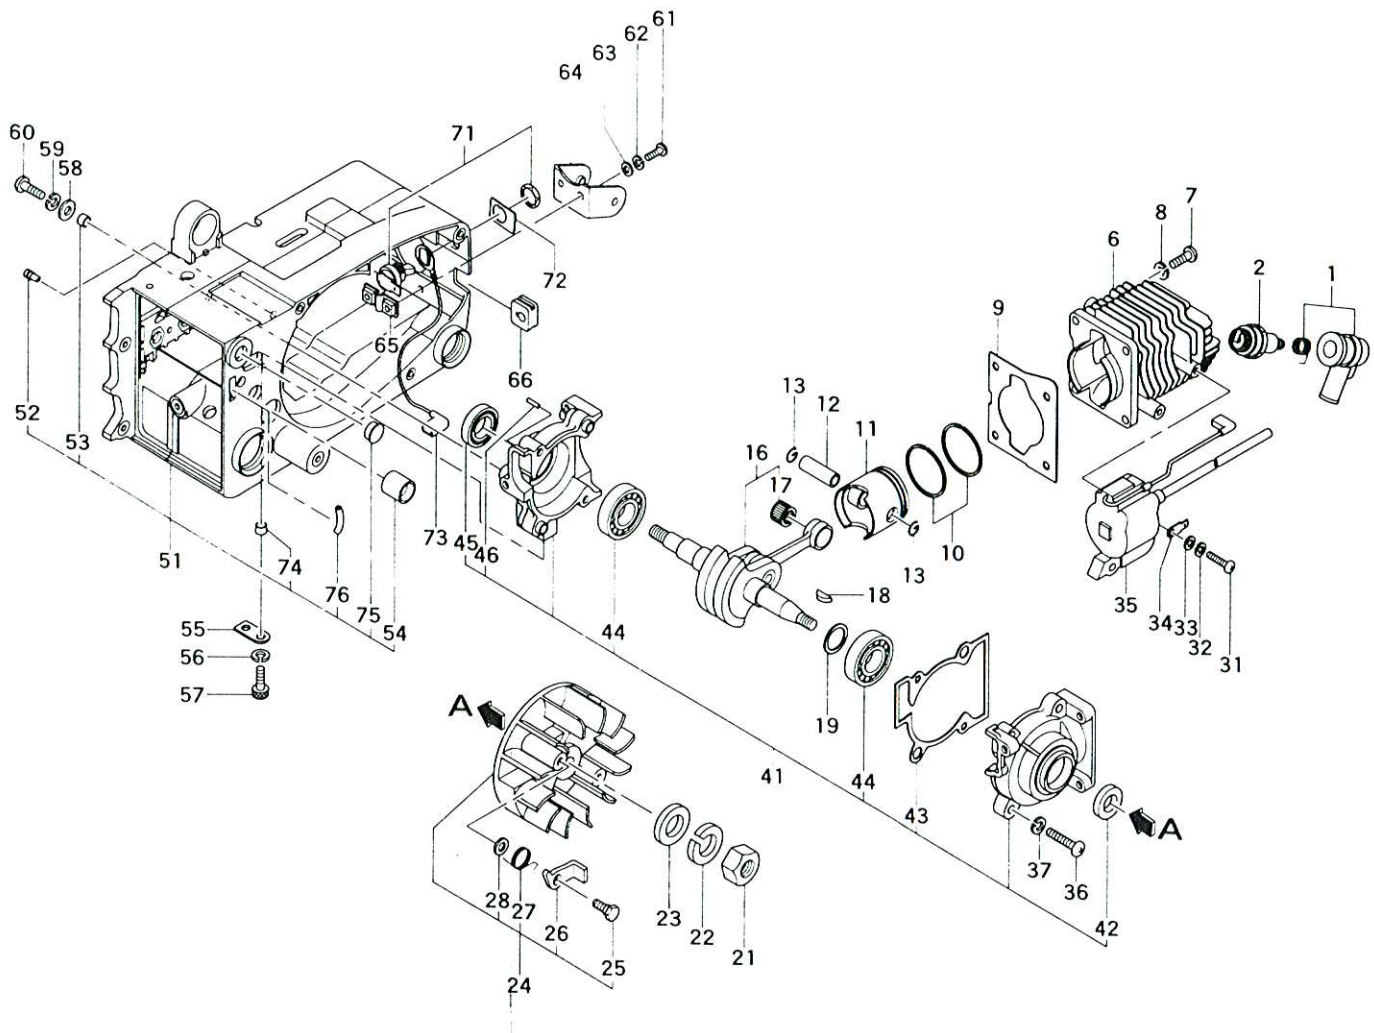

ART NR	FIG NR	TILLV.NR	BENÄMNING	ANTAL
		FIG. 1 MOTOR		1
501 36 2212	1-035	167-20507-800	Tändspole	1
0036	1-036	990-11050-251	Skruv 5 x 25	4
0253	1-037	992-10050-012	Fjäderbricka 5	4
2213	1-041	072-01700-910	Vevhus komplett	1
2005	1-042	999-66122-200	Tättring 12227	1
2214	1-043	090-01700-200	Vevhuspackning	1
1440	1-044	999-61620-200	Kullager 6202	2
4006	1-045	999-66152-500	Tättring 15257	1
2318	1-046	999-05250-980	Stift 2.5 x 9.8	1
2215	1-051	560-32758-910	Sågkropp	1
2216	1-052	562-04060-200	Luftventil B	1
2319	1-053	031-32710-210	Hylsa	2
2217	1-054	629-11600-900	Avluftningsventil	1
2218	1-055	874-32710-210	Plåt B	1
0254	1-056	992-10060-012	Fjäderbricka 6	2
2166	1-057	990-51060-203	Insexskruv 6 x 20	2
0203	1-058	992-01050-011	Bricka 5	2
0253	1-059	992-10050-012	Fjäderbricka 5	2
0031	1-060	990-11050-161	Skruv 5 x 16	2
0015	1-061	990-11040-121	Skruv 4 x 12	2
0253	1-062	992-10040-012	Fjäderbricka 4	2
0202	1-063	992-00040-011	Bricka 4	2
2219	1-064	243-32750-201	Fäste	1
2220	1-065	873-32750-800	Plåt A	1
2221	1-066	203-10000-200	Genomföring	1
2222	1-071	162-01570-900	Stoppknapp	1
2169	1-072	183-01300-200	Stopp-Plåt	1
2223	1-073	274-01710-800	Jordledning	1
2224	1-074	031-32750-200	Hylsa	2
2225	1-075	052-32718-200	Plugg A	1
2226	1-076	700-12004-026	Slang	1


FIG. 2 AVGAS & INSUG

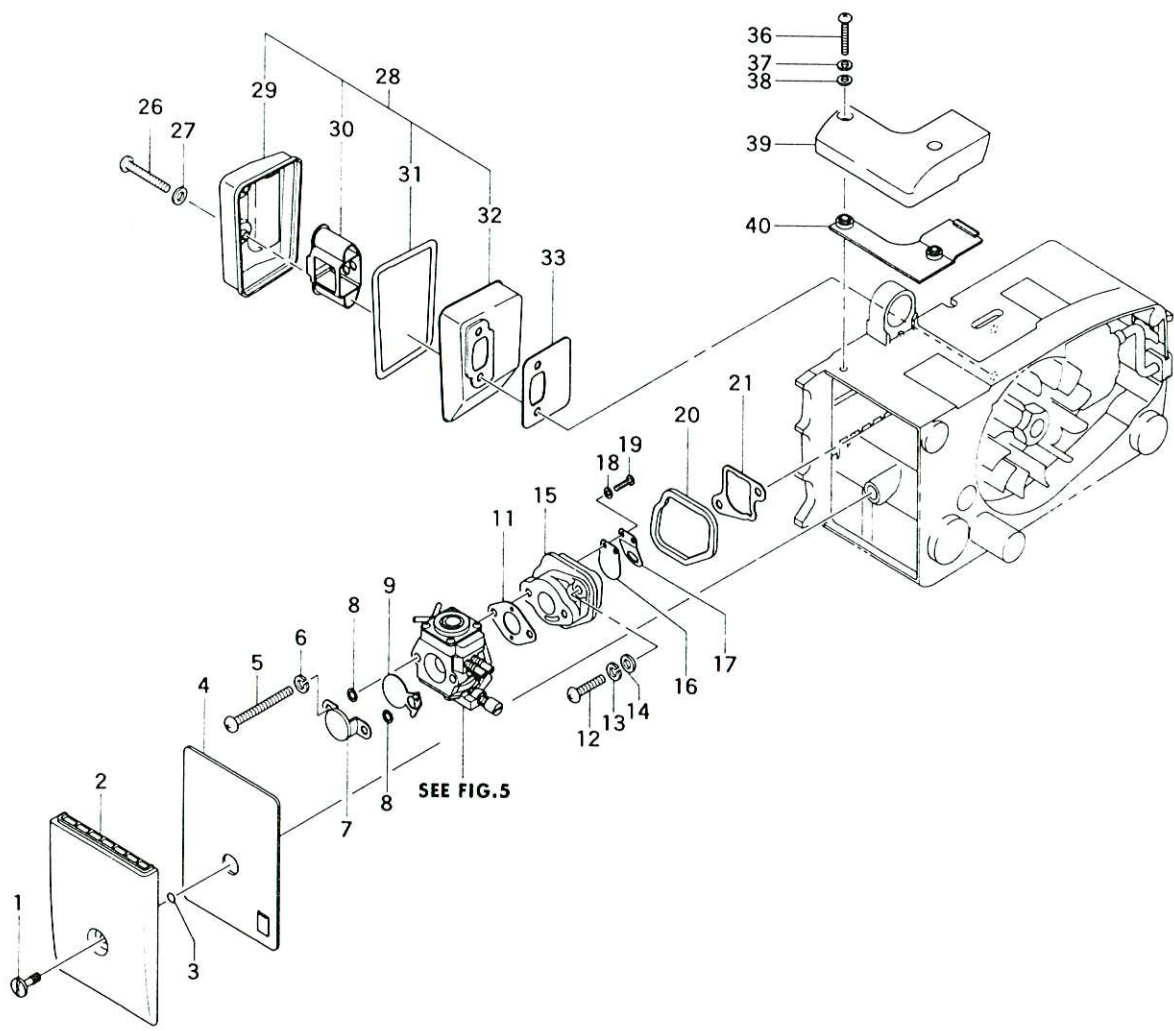

ART NR	FIG NR	TILLV.NR	BENÄMNING	ANTAL
FIG. 2 AVGAS & INSUG				
501362227	2-001	170-32710-200	Skruv	1
2228	2-002	051-32710-200	Filterkåpa A	1
1298	2-003	999-67003-000	O-Ring P3	1
2229	2-004	420-01700-800	Filterinsats	1
0039	2-005	990-11050-401	Skruv 5 x 40	2
0253	2-006	992-10050-012	Fjäderbricka 5	2
2230	2-007	476-01700-200	Konsol	1
1333	2-008	708-32350-200	Distansbricka	2
2231	2-009	700-32710-200	Chokespjäll	1
2232	2-011	402-01700-200	Packning	1
0036	2-012	990-11050-252	Skruv 5 x 25	2
0253	2-013	992-10050-012	Fjäderbricka 5	2
1466	2-014	992-00050-011	Specialbricka 5	2
2233	2-015	404-01700-801	Isolator	1
2234	2-016	394-01700-200	Bladventil	1
2235	2-017	395-01700-200	Ventilplåt	1
0251	2-018	992-10030-012	Fjäderbricka 3	2
0009	2-019	990-11030-121	Skruv 3 x 12	2
2236	2-020	409-01700-200	Gummipackning	1
2237	2-021	403-01700-200	Packning	1
0039	2-026	990-11050-401	Skruv 5 x 40	2
0203	2-027	992-01050-011	Bricka 5	2
2238	2-028	705-01709-900	Ljuddämpare komplett	1
2239	2-029	717-01709-800	Ljuddämparehus B	1
2240	2-030	724-01709-200	Insats	1
2241	2-031	739-01709-200	Packning	1
2242	2-032	716-01709-800	Ljuddämparehus A	1
2243	2-033	737-01700-200	Avgaspackning	1
0022	2-036	993-41040-251	Skruv 4 x 25	2
0252	2-037	992-10040-012	Fjäderbricka 4	2
0202	2-038	992-00040-011	Bricka 4	2
2244	2-039	152-32710-200	Insugskåpa B	1
2245	2-040	153-32710-200	Insugskåpa C	1


FIG. 3 SMÖRJ & BRÄNSLESYSTEM

ECS-300

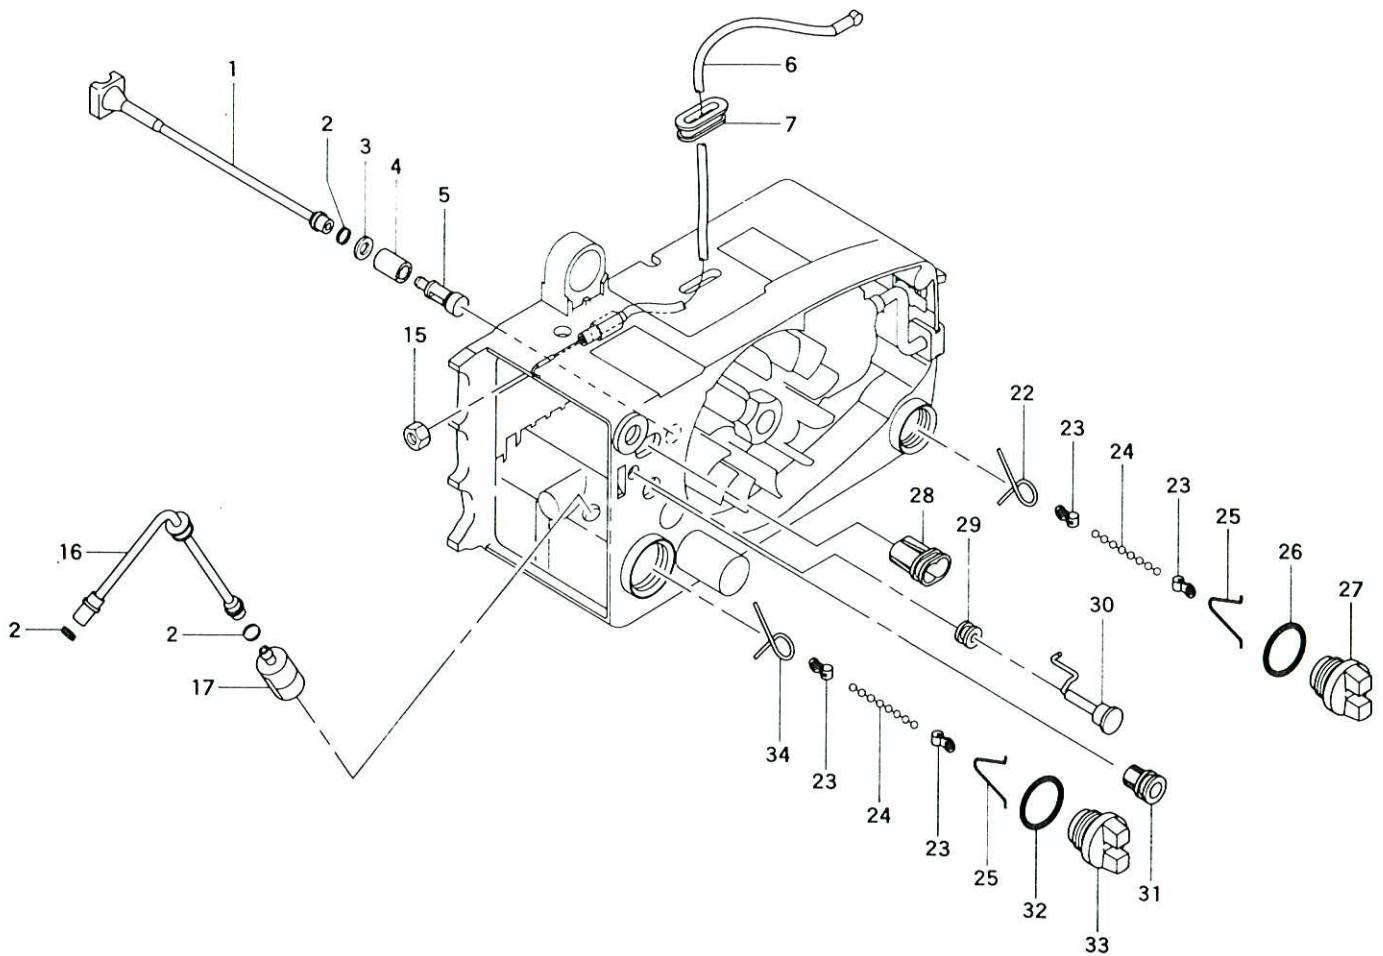


ART NR	FIG NR	TILLV.NR	BENÄMNING	ANTAL
FIG. 3 SMÖRJ & BRÄNSLESYSTEM				
501362246	3-001	505-32710-200	Oljeslang B	1
2507	3-002	680-04019-210	Klammer	3
0203	3-003	992-01050-011	Bricka 5	1
2247	3-004	487-32712-201	Oljefilter	1
2248	3-005	486-32710-200	Filterkropp	1
2249	3-006	885-01710-800	Gaswire	1
2250	3-007	984-01710-200	Genomföring	1
0154	3-015	991-01060-013	Mutter 6	1
2251	3-016	678-01700-200	Bränsleslang	1
2252	3-017	675-11600-900	Bränslefilter komplett	1
2253	3-022	641-32550-200	Fjäder oljetank	1
2254	3-023	627-32350-201	Länk	4
2255	3-024	626-32719-200	Kedja	2
2256	3-025	596-32377-210	Fjäder	2
2320	3-026	999-67018-000	O-ring P-18	1
2257	3-027	520-32710-201	Oljetanklock	1
2258	3-028	190-32710-200	Genomföring	1
2259	3-029	707-32710-200	Genomföring	1
2260	3-030	704-32710-800	Chokereglage	1
2261	3-031	191-32710-200	Genomföring	1
2321	3-032	999-67020-000	O-Ring P-20	1
2262	3-033	628-32710-201	Bränsletanklock	1
2263	3-034	596-32719-200	Fjäder bränsletank	1

FIG.4 STARTAGGREGAT

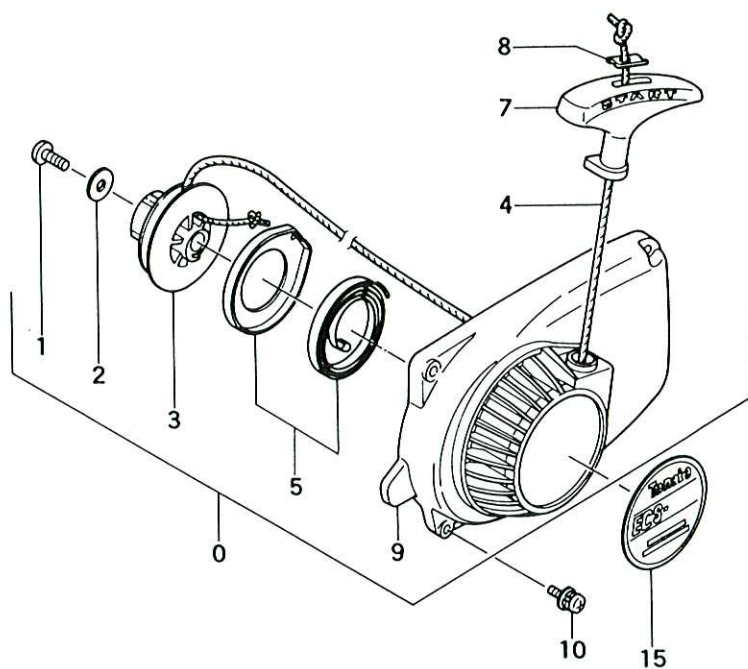

ART NR	FIG NR	TILLV.NR	BENÄMNING	ANTAL
FIG. 4 STARTAGGREGAT				
501 36 2264	4-000	756-01700-901	Startaggregat komplett	1
0028	4-001	990-15050-126	Skruv 5 x 12	1
2265	4-002	786-01700-200	Bricka	1
2266	4-003	774-01700-200	Linhjul	1
2267	4-004	783-01700-201	Startsnöre	1
2268	4-005	778-01700-901	Startfjäder	1
2269	4-007	785-04063-200	Starthandtag	1
2270	4-008	795-04063-200	Snörlås	1
2271	4-009	112-01700-801	Flätkåpa	1
0019	4-010	994-15040-182	Skruv 4 x 18	4
XXXX	4-015	915-32759-200	Dekal LAGERFÖRES EJ	1

FIG. 5 FÖRGASARE

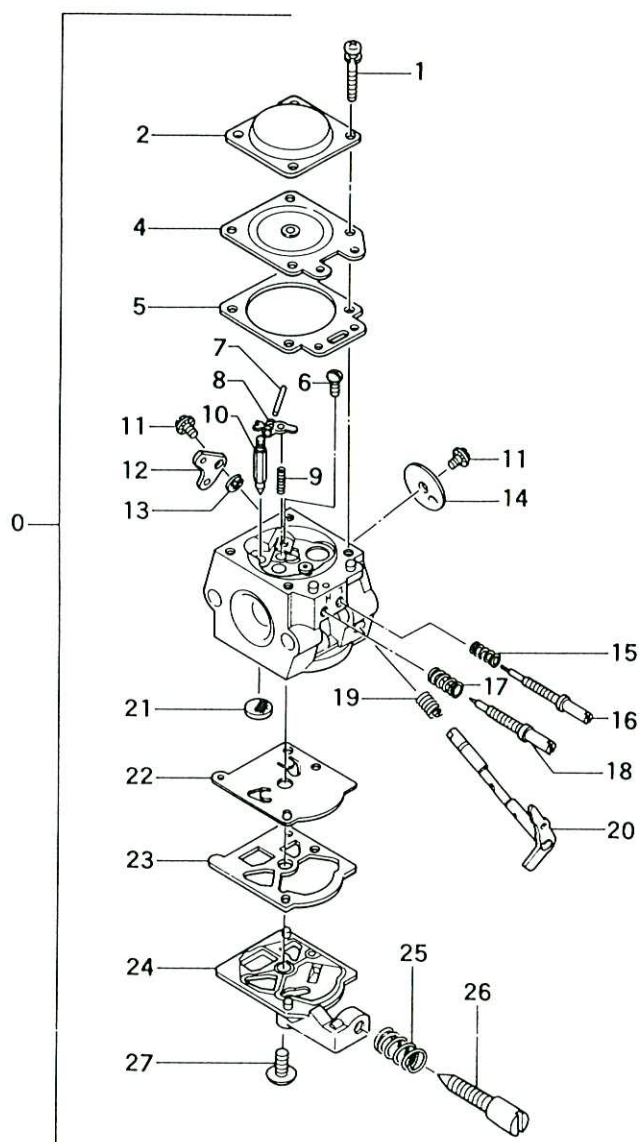


ART NR	FIG NR	TILLV.NR	BENÄMNING	ANTAL
FIG. 5 FÖRGASARE				
501362272	5-000	455-25038-900	Förgasare komplett	1
2054	5-001	548-25012-200	Skruv	4
2053	5-002	476-25004-200	Membrankåpa	1
2052	5-004	474-25001-800	Mambran	1
2273	5-005	475-25038-200	Packning	1
2063	5-006	548-25001-200	Skruv	1
2062	5-007	605-25001-200	Pinne	1
2061	5-008	473-25001-200	Ventilhållare	1
3694	5-009	477-25013-200	Fjäder	1
2060	5-010	603-25001-200	Nålventil	1
2079	5-011	467-25003-200	Skruv	2
2274	5-012	491-25027-200	Länkarm	1
1776	5-013	489-25007-200	Låsring	1
1894	5-014	488-25008-200	Spjäll	1
2073	5-015	623-25001-200	Fjäder	1
2275	5-016	461-25027-200	Justerskruv, lågvarv	1
3691	5-017	485-25003-200	Fjäder	1
2276	5-018	460-25027-200	Justerskruv, högvarv	1
2277	5-019	486-25015-200	Fjäder	1
2278	5-020	464-25027-800	Spjällaxel	1
2066	5-021	578-25007-200	Sil	1
4172	5-022	576-25006-200	Membran	1
3688	5-023	577-25007-200	Packning	1
2279	5-024	575-25028-200	Pumphus	1
4279	5-025	463-25006-200	Fjäder	1
2280	5-026	462-25016-200	Justerskruv, tomgång	1
2074	5-027	514-25001-200	Skruv	1

3129
3361

This exploded view diagram illustrates the assembly of a chainsaw. The main components shown include the engine housing (1), carburetor (2), air filter (3), and the main body (4). The guide bar (41) is shown with its mounting hardware (42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61). The diagram also shows the chain (6) and its tensioning mechanism (7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61). The diagram is a technical drawing with dashed lines indicating the assembly path and alignment of the parts.


ART NR	FIG NR	TILLV.NR	BENÄMNING	ANTAL
FIG. 6 OLJEPUMP & KOPPLING				
501 36 XXXX	6-001	906-32750-200	Dekal LAGERFÖRES EJ	1
1496	6-002	121-32530-200	Svärdsmutter	2
2281	6-004	287-01700-800	Koppling	1
1308	6-005	999-62101-301	Nållager 101310	1
2282	6-006	310-32710-200	Kopplingstrumma	1
1450	6-007	358-04050-201	Kopplingsbricka	1
0015	6-008	990-11040-121	Skruv 4 x 12	4
0252	6-009	992-10040-012	Fjäderbricka 4	4
0202	6-010	992-00040-011	Bricka 4	4
2283	6-011	097-32710-800	Kåpa	1
2284	6-012	515-32710-200	Oljeslang A	1
2285	6-013	084-32710-201	Skruvdrev	1
2286	6-014	567-01700-200	Filter	1
2287	6-016	488-32710-210	Genomföring	1
2288	6-017	501-32710-210	Justerskruv, kedjeolja	1
3573	6-018	999-67007-000	O-ring P-7	1
2289	6-019	088-32710-910	Oljepump, kedjeolja	1
2290	6-021	345-01700-200	Kopplingshalva	2
2291	6-022	346-01700-200	Centrum	1
2292	6-023	342-01700-200	Fjäder ✓	2
2293	6-024	348-01700-200	Plåt A ✓	2
2294	6-025	992-74004-143	Nit 4 x 14	2
0010	6-031	993-41040-101	Skruv 4 x 10	1

FIG. 6 OLJEPUMP & KOPPLING

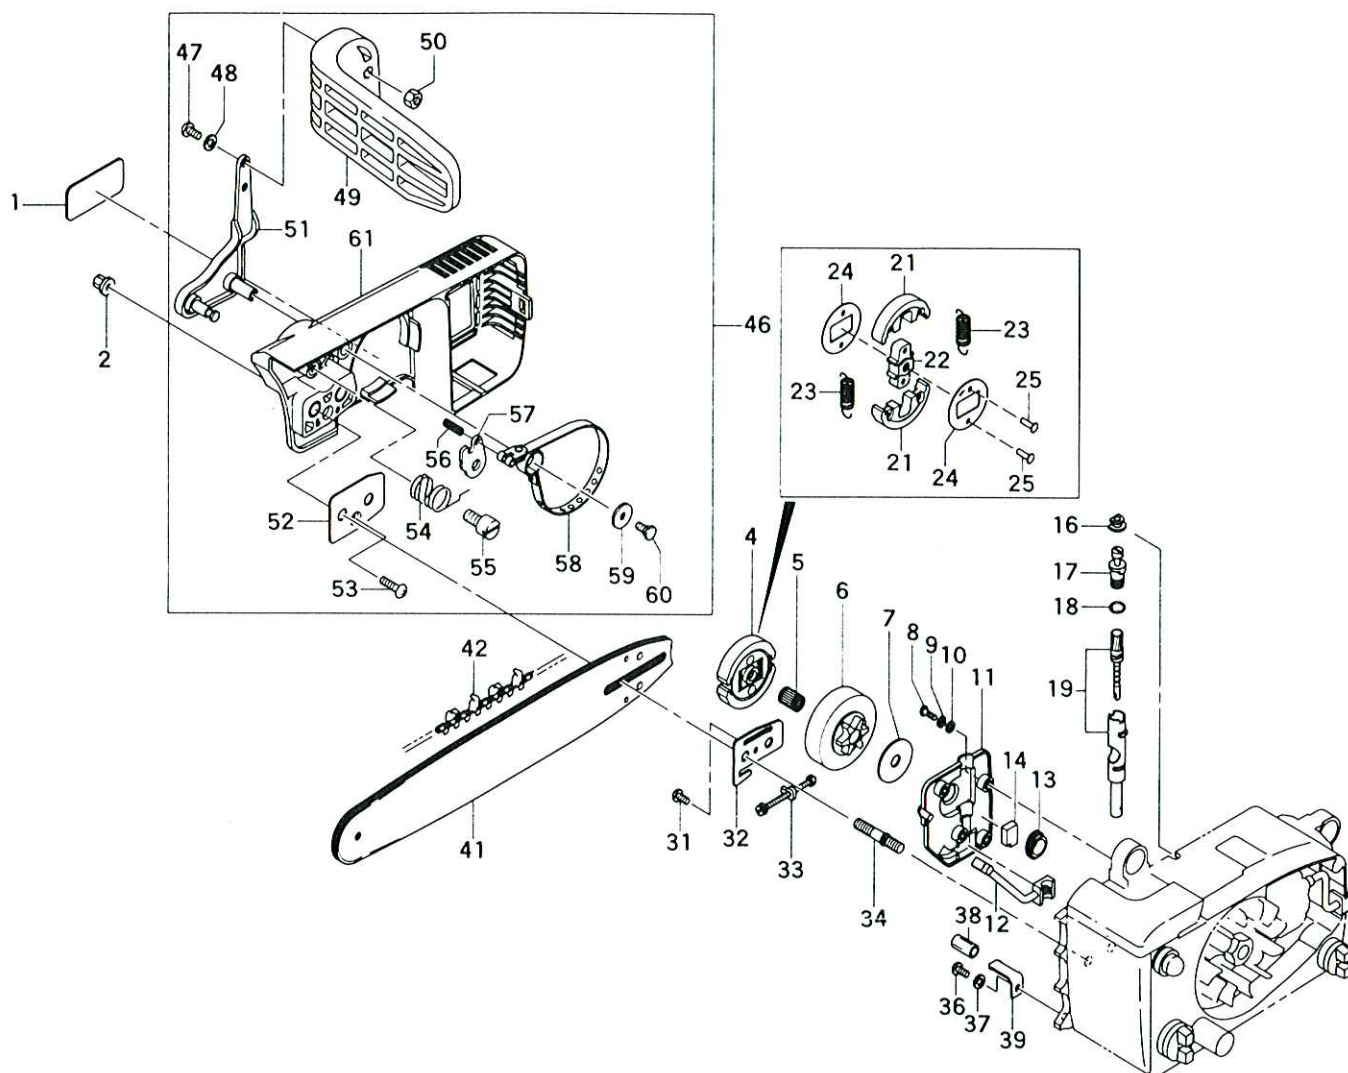

ART NR	FIG NR	TILLV.NR	BENÄMNING	ANTAL
FIG. 6 OLJEPUMP & KOPPLING				
501362295	6-032	466-32710-200	Styrplåt	1
2296	6-033	116-32710-900	Kedjesträckare	1
1494	6-034	101-32530-200	Svärdsbult	2
0028	6-036	990-11050-121	Skruv 5 x 12	1
0253	6-037	992-10050-012	Fjäderbricka 5	1
2297	6-038	700-07105-020	Plastskydd	1
2298	6-039	125-32710-200	Kedjefångare	1
501370601	6-041	108-32376-200	Svärd 120SXEA041	1
0702	6-042	129-32052-201	Kedja 91SG-45 12"	1
501362299	6-046	040-32750-900	Bromskåpa komplett	1
0032	6-047	990-11050-181	Skruv 5 x 18	2
0253	6-048	992-10050-012	Fjäderbricka 5	2
2300	6-049	380-32750-200	Kastskydd	1
0153	6-050	991-01050-011	Mutter 5	2
2301	6-051	361-32750-801	Hävarm	1
2302	6-052	462-32750-200	Styrplåt B	1
0010	6-053	993-41040-101	Skruv 4 x 10	1
1791	6-054	374-32367-210	Fjäder	1
2303	6-055	382-32750-200	Skruv A	1
1319	6-056	993-24040-120	Fjäderpinne 4 x 12	1
1792	6-057	373-32367-201	Lägesplåt	1
2304	6-058	378-32750-800	Bromsband	1
1321	6-059	368-32057-200	Bricka	1
1322	6-060	383-32367-210	Bult B	1
2305	6-061	040-32750-800	Bromskåpa enbart	1


FIG. 7 HANDTAG

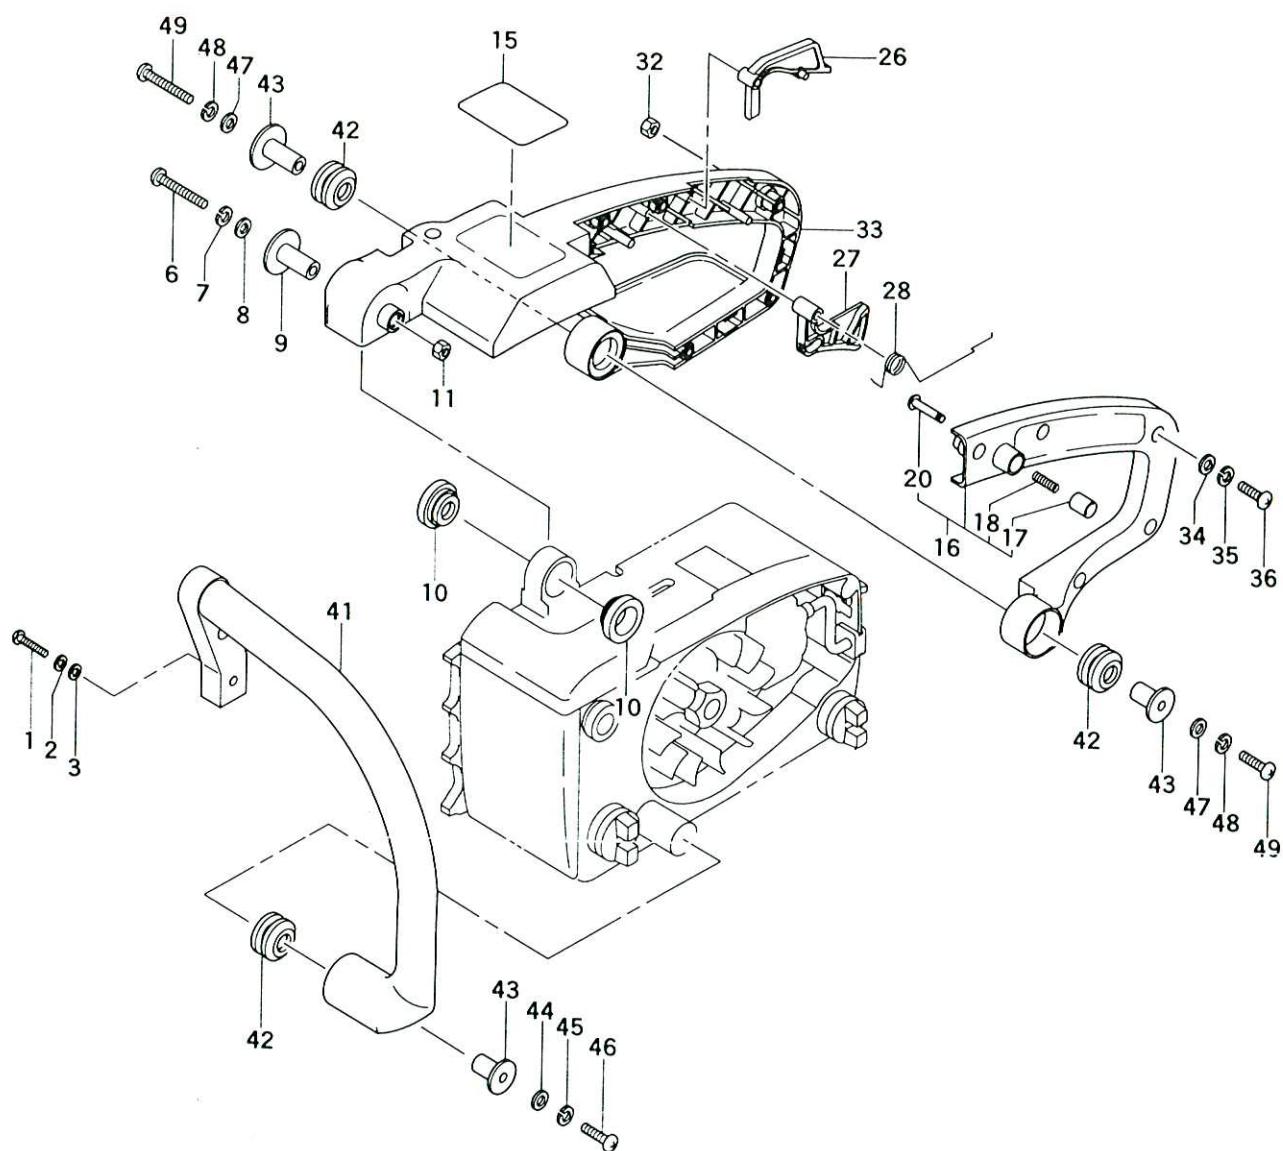

ART NR	FIG NR	TILLV.NR	BENÄMNING	ANTAL
FIG. 7 HANDTAG				
501360036	7-001	990-11050-251	Skruv 5 x 25	1
0253	7-002	992-10050-012	Fjäderbricka 5	1
0203	7-003	992-01050-011	Bricka 5	1
0039	7-006	990-11050-401	Skruv 5 x 40	1
0253	7-007	992-10050-012	Fjäderbricka 5	1
1466	7-008	992-00050-011	Specialbricka 5	1
2306	7-009	275-32710-200	Distanshylsa A	1
2307	7-010	219-32750-200	Bussning A	2
3923	7-011	991-74050-010	Låsmutter 5	1
XXXX	7-015	929-32750-201	Dekal	1
2308	7-016	011-32750-801	Bakre hantag B	1
3910	7-017	725-32600-202	Knopp	1
1296	7-018	066-32300-201	Fjäder	1
2309	7-020	064-33225-200	Pinne	1
2310	7-026	257-32750-201	Säkerhetsspärr	1
2311	7-027	060-32750-202	Gasreglage	1
2312	7-028	061-32750-201	Fjäder	1
0152	7-032	991-01040-011	Mutter 4	5
2313	7-033	010-32750-802	Bakre hantag A	1
0202	7-034	992-00040-011	Bricka 4	5
0252	7-035	992-10040-012	Fjäderbricka 4	5
0021	7-036	990-11040-221	Skruv 4 x 22	5
2314	7-041	209-32750-800	Främre handtag	1
2315	7-042	266-32750-200	Bussning B	3
2316	7-043	276-32710-200	Distanshyla B	3
1466	7-044	992-00050-011	Specialbricka 5	1
0253	7-045	992-10050-012	Fjäderbricka 5	1
0055	7-046	990-11050-301	Skruv 5 x 30	1
1466	7-047	992-00050-011	Specialbricka 5	2
0253	7-048	992-10050-012	Fjäderbricka 5	2
0055	7-049	990-11050-281	Skruv 5 x 28	2

LAGERFÖRES EJ

FIG. 8 VERKTYG & TILLBEHÖR

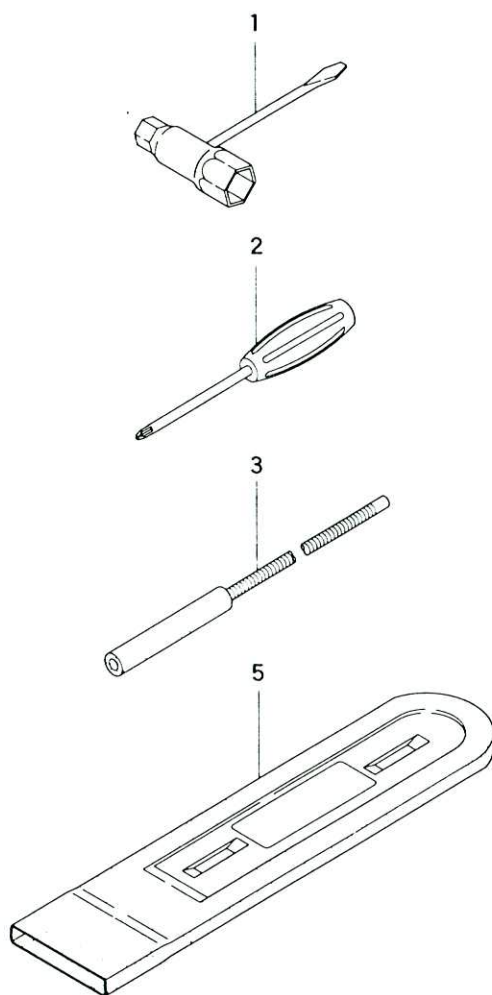

ART NR	FIG NR	TILLV.NR	BENÄMNING	ANTAL
FIG. 8 VERKTYG & TILLBEHÖR				
501361416	8-001	013-29323-501	Combi-Nyckel 10	1
XXXX	8-002	862-20000-200	Kryssmejsel	LAGERFÖRES EJ 1
XXXX	8-003	936-20000-900	Fil	LAGERFÖRES EJ 1
2317	8-005	946-32750-201	Kedjeskydd	1