


Tanaka


RESERVDELSKATALOG

GRÄSRÖJARE

AST - 7000

OBS! KONTROLLERA ATT MASKINEN ÄR
EN AST 7000
OCH INTE AST 7000 N
DESSA MASKINER HAR HELT OLIKA
RESERVDELAR.

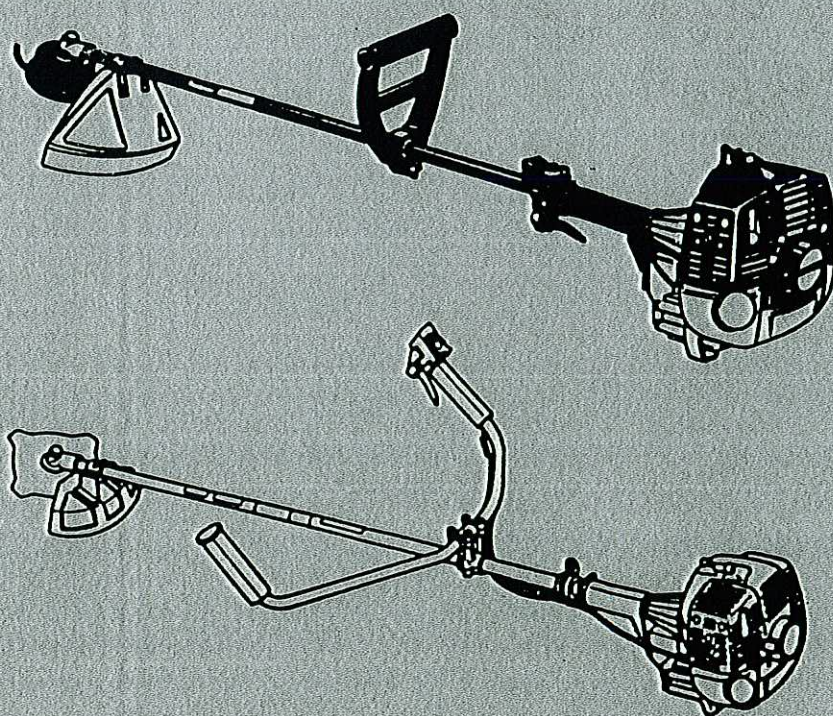

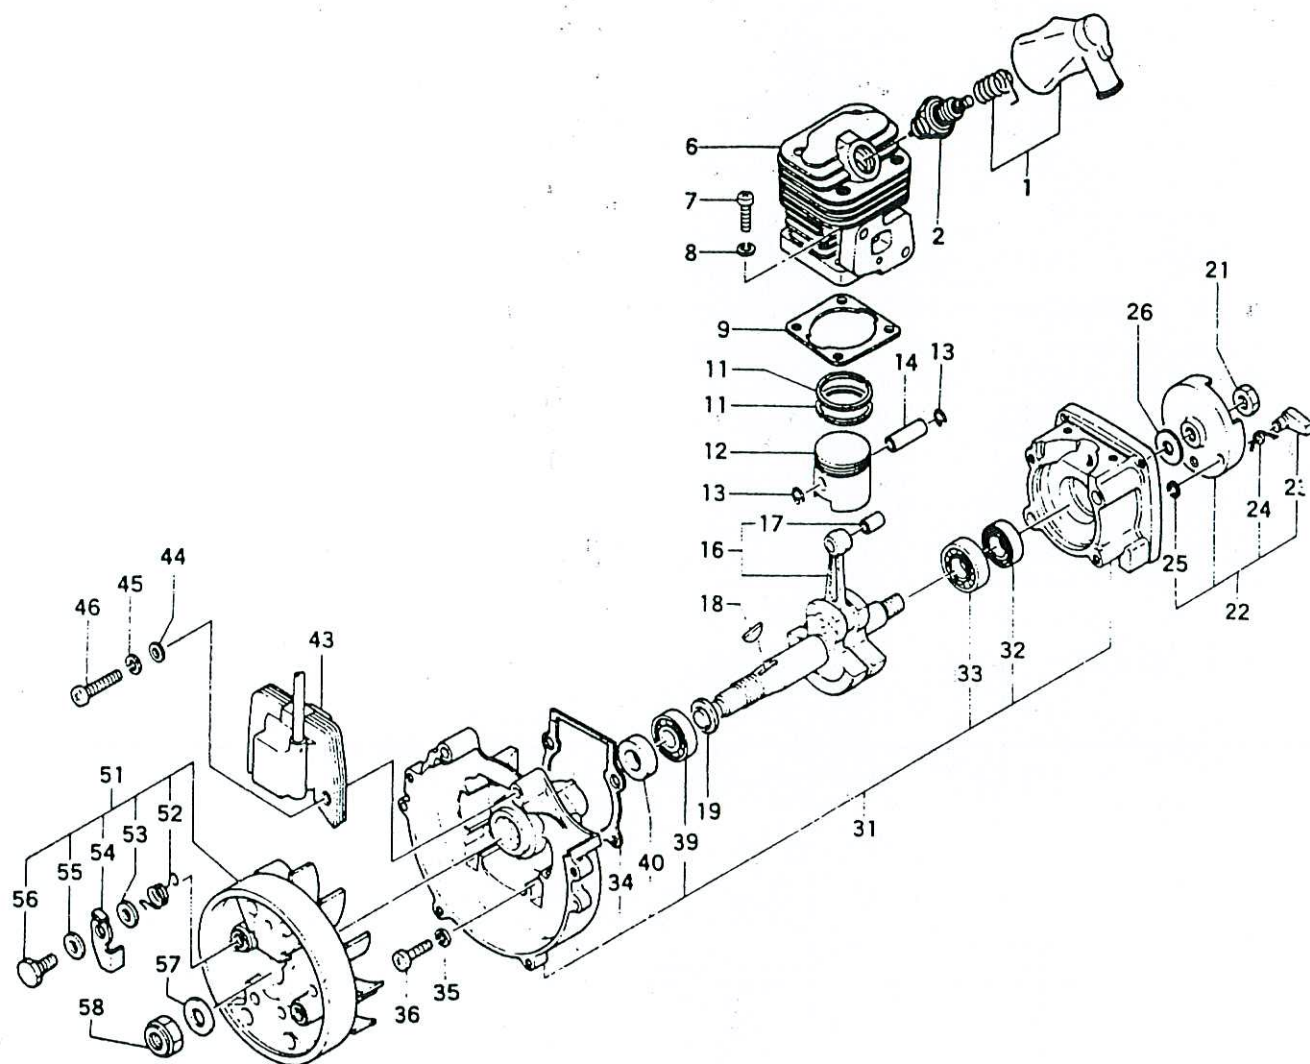


FIGUR 1 MOTOR

POS.	ARTIKELNR	TILLVERKN.NR.	BENÄMNING	MOTORNR	ANT.
1-001	50136 7200	757-0631A-90	TÄNDSTIFTSKÅPA KOMP.		1
1-002	1432	018-11610-20	TÄNDSTIFT BPM 6 A		1
1-006	7201	002-0631P-20	CYLINDER		1
1-007	0032	990-11050-181	SKRUV 5 X 18		4
1-008	0253	992-10050-012	FJÄDERBRICKA 5		4
1-009	5301	017-0631A-20	CYLINDERPACKNING		1
1-011	2014	041-00601-21	KOLVRING UNDRE		2
1-012	2010	031-0631P-20	KOLV		1
1-013	3101	039-01620-20	LÅSRING		2
1-014	2011	037-00601-20	KOLVBULT		1
1-016	7203	046-0631P-80	VEVAXEL		1
1-017	1856	999-62081-225	NÅLLAGER F-810		1
1-018	2009	068-10100-20	KRYSSKIL 3X13X4,5		1
1-019	4244	071-02007-20	SHIMSBRICKA 0.05		V
1-019	4245	071-02007-21	SHIMSBRICKA 0.10		V
1-019	4246	071-02007-22	SHIMSBRICKA 0.15		V
1-019	2906	071-02007-23	SHIMS 0.20		V
1-021	0156	991-01080-011	MUTTER 8		1
1-022	7204	798-06097-90	SPÄRRHUS KOMPLETT		1
1-023	7205	788-06097-20	STARTSPÄRR		1
1-024	7206	790-06097-20	SPÄRRFJÄDER		1
1-025	3105	993-55005-000	LÅSRING		1
1-026	4015	359-10112-20	KOPPL.BRICKA B		1
1-031	7207	072-0631P-90	VEVHUS KOMPLETT		1
1-032	2005	999-66122-266	TÄTNING 12227		1
1-033	2004	999-61600-100	KULLAGER 6001		1
1-034	7208	090-06097-20	VEVHUSPACKNING		1
1-035	0253	992-10050-012	FJÄDERBRICKA 5		4
1-036	0036	990-11050-251	SKRUV 5 X 25		4
1-039	1021	999-61600-200	KULLAGER 6002		1
1-040	4006	999-66152-50	TÄTNING		1
1-043	7209	167-20508-80	TÄNDSPOLE		1
1-044	1466	992-00050-011	SPECIALBRICKA 5		2
1-045	0253	992-10050-12	FJÄDERBRICKA 5		2
1-046	0033	990-11050-201	SKRUV 5 X 20		2
1-051	5307	155-20514-90	MAGNETHJUL KOMPLETT		1
1-052	5308	790-0633M-21	SPÄRRFJÄDER		2
1-053	2025	786-00601-20	SPÄRRBRICKA		2
1-054	5309	788-0633M-21	STARTSPÄRR		2
1-055	3002	822-00601-20	MELLANLÄGG		2
1-056	2027	793-0636T-20	SPÄRRBULT		2
1-057	0208	992-00120-011	BRICKA 12		1
1-058	7213	066-0631P-20	MUTTER		1

ANMÄRKNINGAR

AST 7000 1:2-93

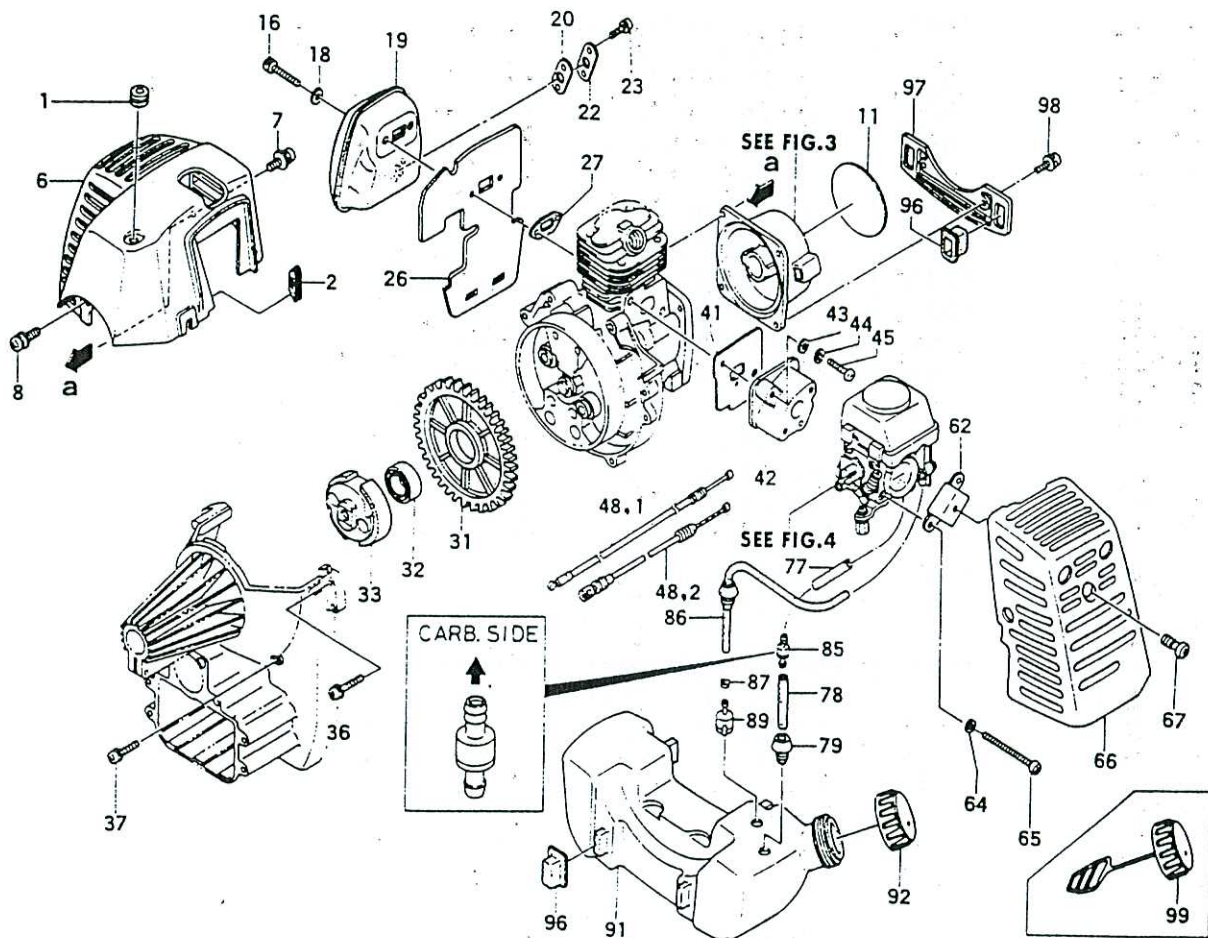


FIGUR 2 MOTOR

POS.	ARTIKELNR	TILLVERKN.NR.	BENÄMNING	MOTORN	ANT.
2-001	50136 4023	202-01003-20	LEDNINGSHYLSA		1
2-002	7214	203-0631A-20	GENOMFÖRING		1
2-006	7215	738-0631A-20	VÄRMESKYDD		1
2-007	0021	994-15040-222	SKRUV 4 X 22		2
2-008	0015	990-11040-121	SKRUV 4 X 12		2
2-011	XXXX		LAGERFÖRES EJ		
2-016	7216	990-51050-503	INSEXSKRUV 5X50		2
2-018	0203	992-01050-061	BRICKA 5		2
2-019	7217	706-0631A-80	LJUDDÄMPARE		1
2-020	3321	751-04200-20	AVGASPACKNING		1
2-022	7219	734-0631A-20	UTBLÅSNINGSRÖR		1
2-023	0013	994-14040-081	SKRUV 4 X 8		2
2-026	7220	133-0631A-20	VÄRMESKÖLD		1
2-027	3672	737-06100-21	AVGASPACKNING		1
2-031	7221	774-0631P-81	STARTKRANS		1
2-032	7428	999-61600-001	KULLAGER 6000 ZZ		1
2-033	7222	277-0631Q-90	KOPPLING KOMPL.		1
2-036	0033	990-11050-201	SKRUV 5 X 20		1
2-037	0039	994-14050-402	SKRUV 5 X 40		3
2-041	7223	403-0631A-20	PACKNING		1
2-042	7224	404-0631P-80	ISOLATOR		1
2-043	0203	992-01050-011	BRICKA 5		2
2-044	0253	992-10050-012	FJÄDERBRICKA 5		2
2-045	0034	990-11050-221	SKRUV 5 X 22		2
2-048	7225	885-0631S-80	GASWIRE ENKELHANDTAG		1
2-048	7326	885-0631W-80	GASWIRE MOTORSIDA DH		1
2-062	7226	476-0631P-20	FÄSTE		1
2-064	0252	992-10040-012	FJÄDERBRICKA 4		2
2-065	0067	990-11040-551	SKRUV 4 X 55		2
2-066	7227	452-0631P-20	KÅPA		1
2-067	7228	380-0631A-20	SKRUV		1
2-077	7361	700-03005-03	BRÄNSLESLANG		1
2-078	7229	700-03005-06	BRÄNSLESLANG 3X5X95		2
2-079	7230	222-06300-20	GENOMFÖRING		1
2-085	7231	586-25108-90	VENTIL		1
2-086	3113	223-0162V-90	BRÄNSLESLANG		1
2-087	1769	680-00731-20	KLAMMER		1
2-089	2252	675-11600-90	BRÄNSLEFILTER		1
2-091	7232	591-0631A-20	BRÄNSLETANK		1
2-092	2108	595-0165C-91	TANKLOCK KOMPL		1
2-096	7233	655-00940-20	GUMMISKYDD		4
2-097	7234	653-0631A-20	FÄSTE		1
2-098	0021	994-15040-222	SKRUV 4 X 22		4

AST 7000 2:2-93

ANMÄRKNINGAR

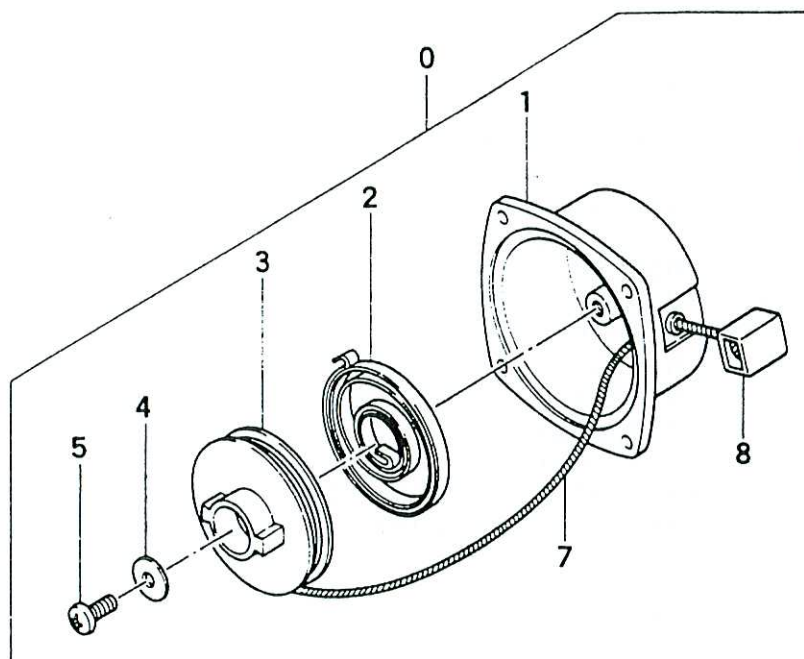


FIGUR 3 STARTAGGREGAT

POS.	ARTIKELNR	TILLVERKN.NR.	BENÄMNING	MOTORNr	ANT.
3-000	50136 7236	762-0631R-90	STARTAGGREGAT KOMPL.		1
3-001	7237	772-0631R-20	STARTRUS		1
3-002	3115	780-06097-20	STARTFJÄDER		1
3-003	7238	774-06097-20	LINHJUL		1
3-004	7239	801-06091-20	BRICKA		1
3-005	0028	990-15050-126	SKRUV 5 X 12		1
3-007	7240	783-06097-20	STARTSNÖRE		1
3-008	7241	785-0631R-20	HANDTAG		1

ANMÄRKNINGAR

AST 7000 3:2-93

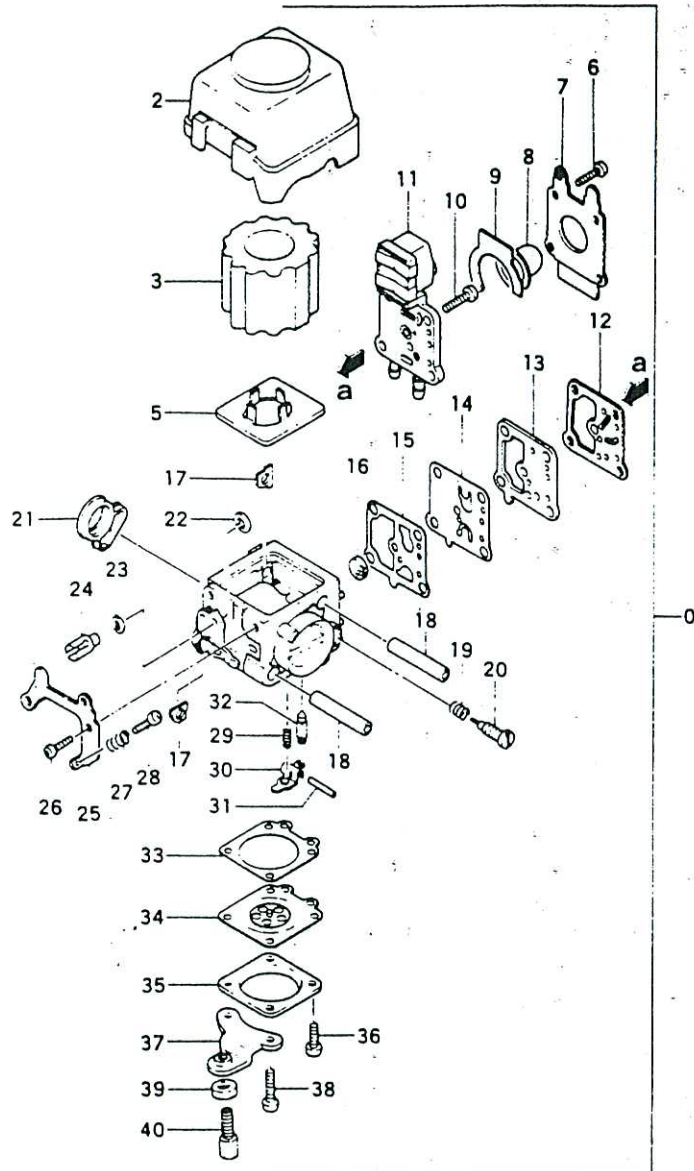


FIGUR 4 FÖRGASARE

POS.	ARTIKELNR	TILLVERKN.NR.	BENÄMNING	MOTORNR	ANT.
4-000	50136 7242	455-25108-90	FÖRGASARE		1
4-002	7243	424-0631P-20	FILTERKÅPA		1
4-003	7244	421-0631P-20	INSATS		1
4-005	7245	425-0631P-20	PLATTA		1
4-006	7246	548-25108-20	SKRUV		4
4-007	7247	452-25108-20	KÅPA		1
4-008	7248	447-25108-20	BLÅSA		1
4-009	7249	635-25108-20	PACKNING		1
4-010	7246	548-25108-20	SKRUV		1
4-011	7250	575-25108-80	PUMPHUS		1
4-012	7251	522-25108-20	PACKNING		1
4-013	7252	523-25108-20	PLATTA		1
4-014	7253	576-25108-20	MEMBRAN		1
4-015	7254	577-25108-20	PACKNING		1
4-016	3361	578-25007-20	SIL		1
4-017	7256	636-25108-20	BRICKA		2
4-018	7257	437-25108-20	DISTANS		2
4-019	7258	485-25108-20	FJÄDER		1
4-020	7259	460-25108-20	JUSTERSKRUV HÖGVARV		1
4-021	7260	449-0631P-20	PACKNING		1
4-022	3754	489-25100-20	LÅSRING		1
4-023	2601	549-25100-20	BRICKA		1
4-024	3695	539-25008-20	WIRENIPPEL		1
4-025	7261	544-25108-20	FÄSTE		1
4-026	7262	514-25108-20	SKRUV		2
4-027	3760	463-25100-20	FJÄDER		1
4-028	3759	462-25100-20	JUSTERSKRUV TOMGÅNG		1
4-029	3694	477-25013-20	FJÄDER		1
4-030	2061	473-25001-20	VENTILHÅLLARE		1
4-031	2062	605-25001-20	PINNE		1
4-032	3375	603-25012-20	NÅLVENTIL		1
4-033	2051	475-25001-20	MEMBRANPACKN		1
4-034	2052	474-25001-80	MEMBRAN		1
4-035	2053	476-25004-20	MEMBRANKÅPA		1
4-036	7263	514-25105-20	SKRUV		2
4-037	7264	614-25108-20	FÄSTE		1
4-038	7262	514-25108-20	SKRUV		2
4-039	1863	613-25100-20	MUTTER		1
4-040	2083	614-25100-20	WIREJUSTERING		1

ANMÄRKNINGAR

AST 7000 4:2-93

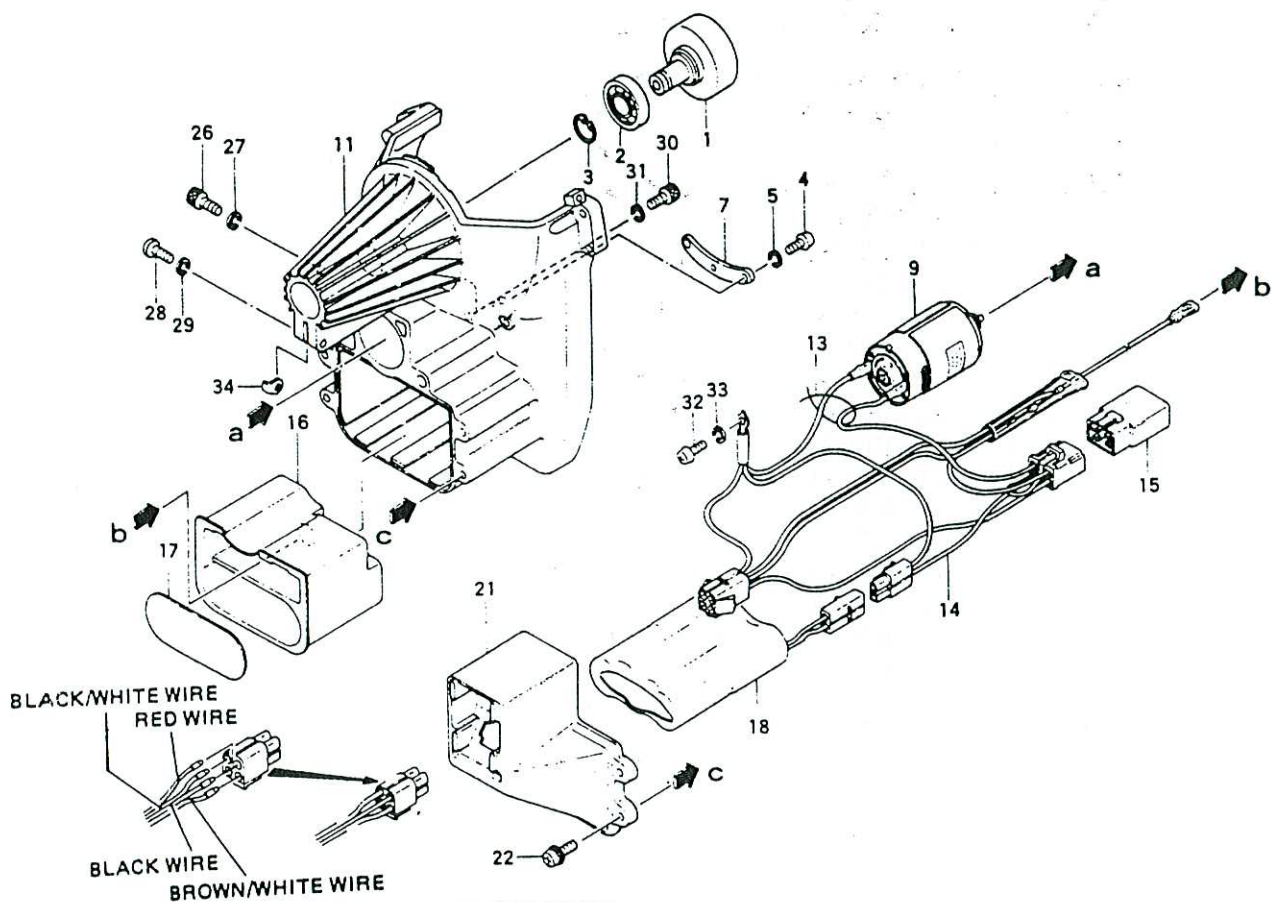



WARNING: Incorrect wiring can cause serious damage to electrical components.

FIGUR 5 KOPPLING OCH ELSYSTEM

POS.	ARTIKELNR	TILLVERKN.NR.	BENÄMNING	MOTORNR	ANT.
5-001	50136	7267	289-0631Q-80		1
5-002		2803	999-61620-101		1
5-003		3031	993-50012-002		1
5-004		0010	990-11040-101		2
5-005		0252	992-10040-012		2
5-007		7268	670-37600-20		1
5-009		7269	306-0631P-80		1
5-011		7270	112-0631P-20		1
5-013		7314	266-37600-20		1
5-014		7271	655-37600-80		1
5-015		7272	667-37600-80		1
5-016		7273	152-0631P-20		1
5-017		7274	599-0631P-20		1
5-018		7275	660-37600-90		1
5-021		7276	136-0631P-20		1
5-022		0032	994-15050-182		4
5-026		1311	990-51050-103		1
5-027		0253	992-10050-012		1
5-028		3403	990-53060-203		1
5-029		0254	992-10060-062		1
5-030		7277	990-51030-103		2
5-031		0251	992-10030-012		2
5-032		0013	990-11040-081		1
5-033		0252	992-10040-012		1
5-034		7235	249-0630G-20		1
		7313	Laddare		

AST 7000 5:2-93

ANMÄRKNINGAR

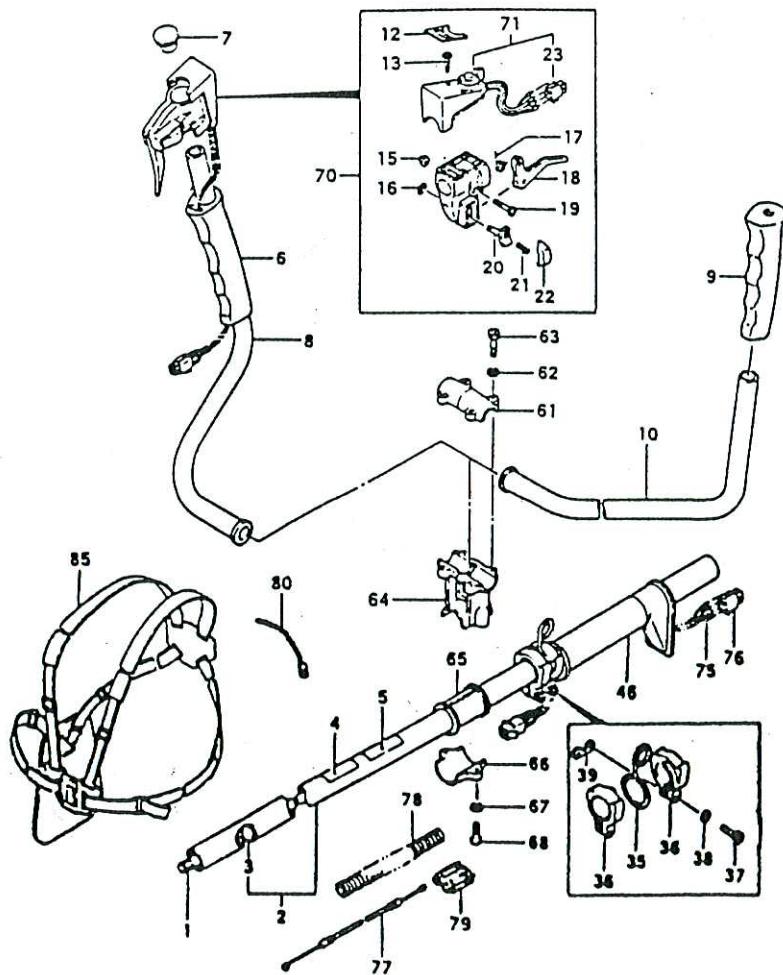
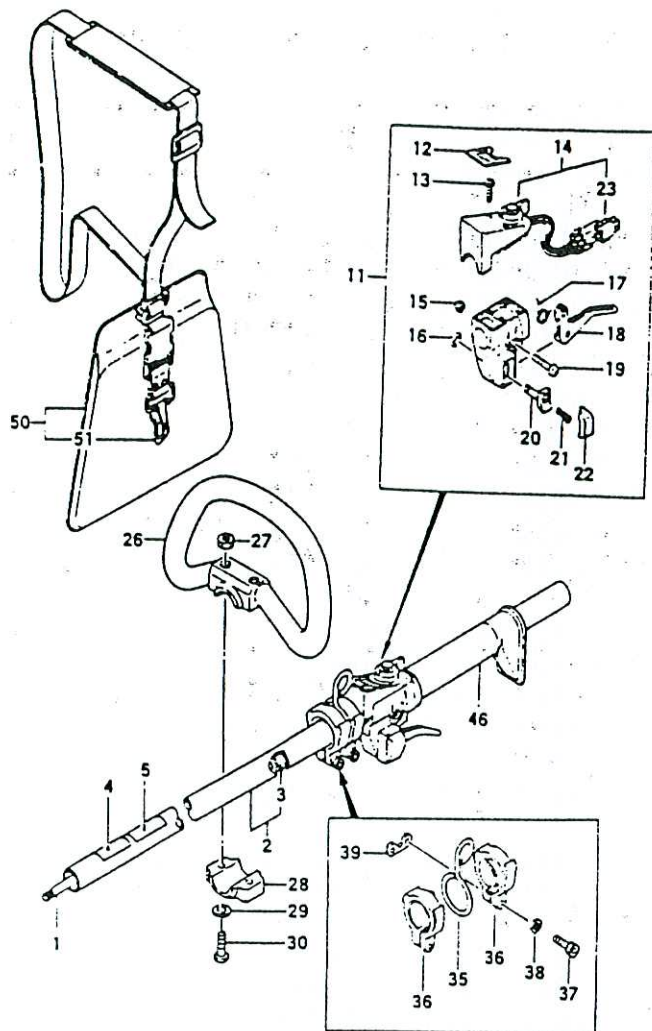


FIGUR 6 RIGG OCH HANDTAG

POS.	ARTIKELNR	TILLVERKN.NR.	BENÄMNING	MOTORNR	ANT.
6-001	50136 7278	343-37300-20	DRIVAXEL Ø 7 L=1504		1
6-002	5516	341-37300-80	RIGGRÖR		1
6-003	7416	347-37601-90	BUSSNING INGÅR I RÖR		5
6-004	XXXX		LAGERFÖRES EJ		
6-005	XXXX		LAGERFÖRES EJ		
6-006	2445	503-37113-20	HANDTAG		1
6-007	1934	499-37100-20	PROPP		1
6-008	1966	501-33674-20	STYRRÖR HÖGER		1
6-009	4374	165-33130-20	HANDTAG A		1
6-010	1970	502-33674-21	STYRRÖR VÄNSTER		1
6-011	7281	870-37600-91	GAS-STARTREGLAGE KOM		1
6-012	7282	169-37600-20	PLÅT		1
6-013	5445	993-42030-251	PLÅTSKRUV 3 X 25		2
6-014	7284	156-37600-91	STARTKONTAKT KOMPL.		1
6-015	0199	991-86050-000	LÅSMUTTER 5		1
6-016	1960	993-55060-001	LÅSRING 6		1
6-017	7285	832-37101-20	FJÄDER		1
6-018	7286	880-37101-20	GASARM		1
6-019	0036	990-11050-251	SKRUV 5 X 25		1
6-020	7287	853-37101-20	LÅSAXEL		1
6-021	7288	958-37101-20	FJÄDER		1
6-022	7289	956-37101-20	LÅSKNAPP		1
6-023	5360	656-37600-20	KONTAKT		1
6-026	7350	500-37600-20	HANDTAG		1
6-027	0154	991-01060-011	MUTTER 6		2
6-028	7351	506-37600-20	FÄSTE		1
6-029	0204	992-01060-011	BRICKA 6		2
6-030	7359	990-53060-403	INSEXSkrUV 6 X 40		2
6-035	1967	335-37307-20	LYFTÖGLA		1
6-036	7329	334-37304-21	KLÄMRING		2
6-037	1388	990-51050-303	INSEXSkrUV 5 X 30		2
6-038	0203	992-01050-011	BRICKA 5		2
6-039	1969	315-37304-20	SPECIALMUTTER		1
6-046	7290	504-37603-20	HANDTAG		1
6-050	50137 4802	746-33564-90	ENKELSELE		1
6-051	50136 7369	748-33564-90	UPPHÄNGNINGSKROK		1
6-061	1961	506-37304-21	LOCK A		1
6-062	0253	992-10050-012	FJÄDERBRICKA 5		4
6-063	1289	990-51050-253	INSEXSkrUV 5 X 25		4
6-064	1962	507-37304-20	HANDTAGSFÄSTE B		1
6-065	7328	510-37304-20	GUMMIBUSSNING		1
6-066	1964	508-37304-21	HANDTAGSFÄSTE C		1
6-067	0254	992-10060-062	FJÄDERBRICKA 6		2
6-068	1965	990-53060-253	INSEXSkrUV 6 X 25		2

ANMÄRKNINGAR

AST 7000 6:2-93

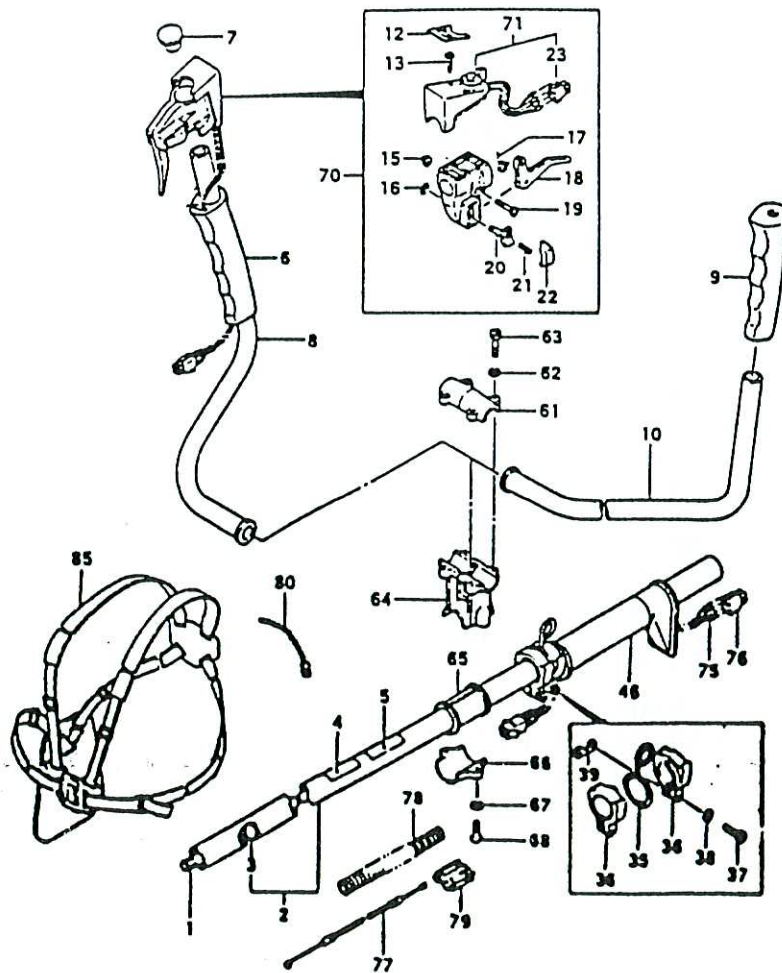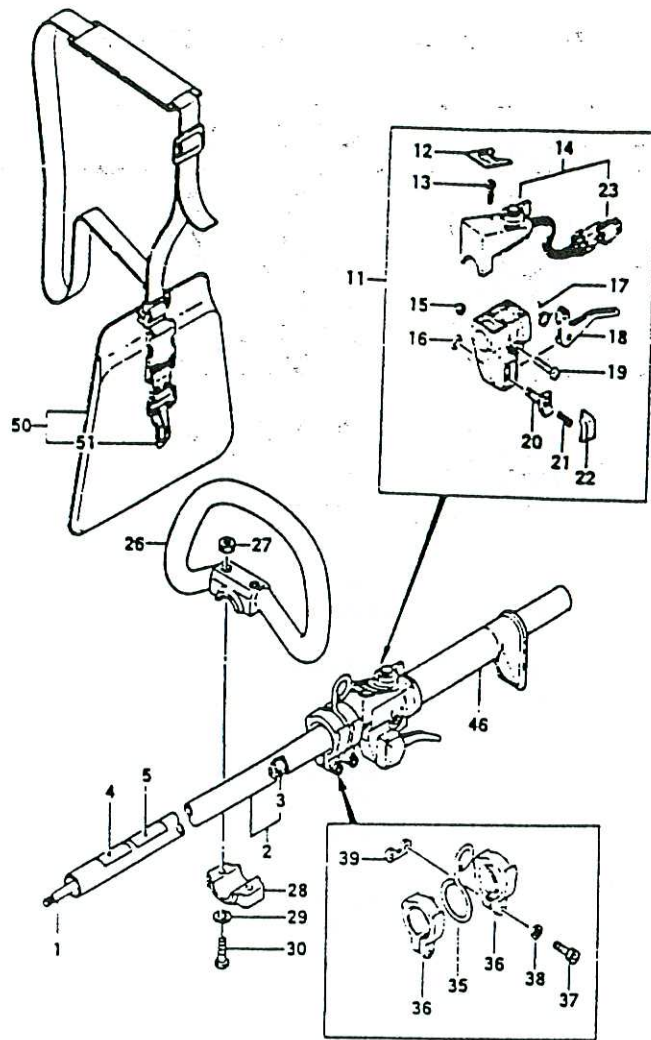


FIGUR 6 RIGG OCH HANDTAG

POS.	ARTIKELNR	TILLVERKN.NR.	BENÄMNING	MOTORNR	ANT.
6-070	50136 7322	870-37609-91	GASREGLAGE		1
6-071	7323	156-37609-91	STARTKONTAKT		1
6-075	7319	672-37609-80	KABELHÄRVA		1
6-076	5360	656-37600-20	KONTAKT		1
6-077	7320	885-37609-80	GASWIRE DH		1
6-078	7321	164-13045-01	SKYDDSHÖLJE		1
6-078	1977	888-04030-20	SKARVHYLSA		1
6-080	1971	460-33111-90	KABELBAND		1
6-085	50137 4801	746-37100-90	RÖJSÅGSSELE D 3		1

ANMÄRKNINGAR

AST 7000 6:2-93

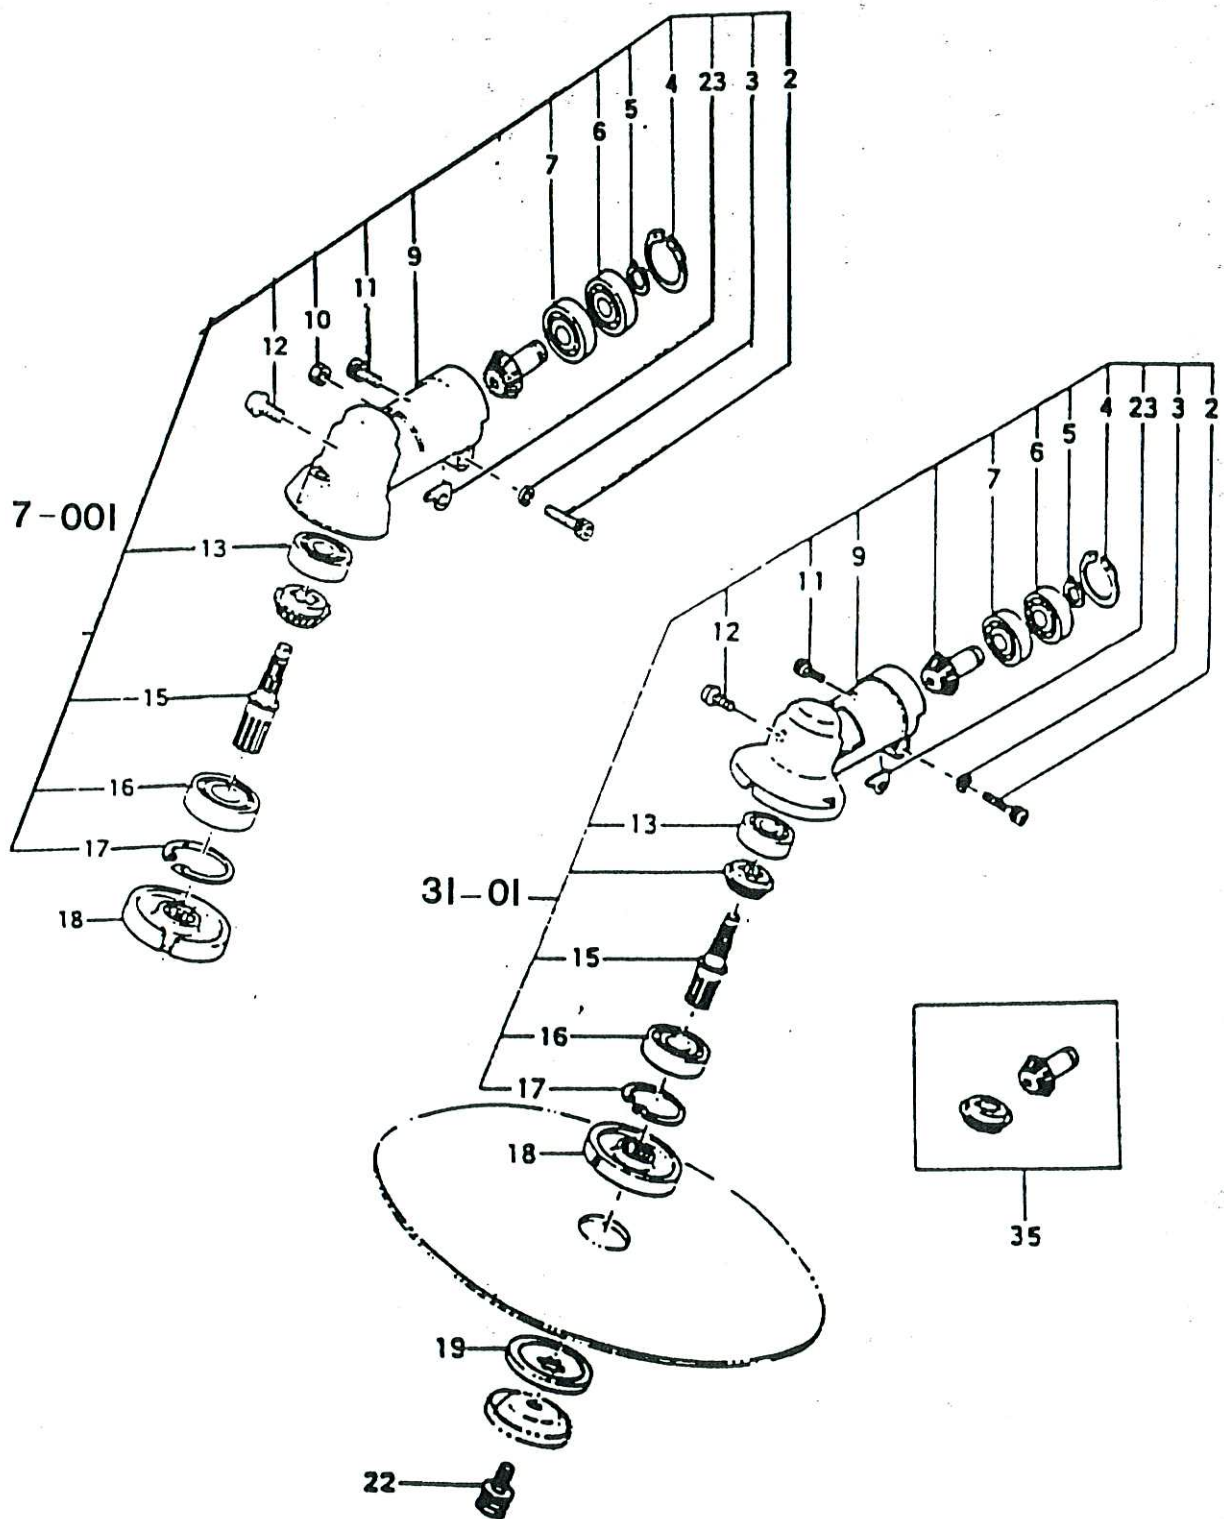


FIGUR 7 VINKELVÄXEL

POS.	ARTIKELNR	TILLVERKN.NR.	BENÄMNING	MOTORNr	ANT.
7-001		300-37300-90	VINKELVÄXEL ERSATT AV POS 31-01		
7-002	50136 1289	990-51050-253	INSEXSKRUV 5 X 25		1
7-003	0253	992-10050-012	FJÄDERBRICKA 5		1
7-004	7299	993-53022-002	LÅSRING R-22 INV		1
7-005	2866	993-50010-002	LÅSRING C-10 UTV		1
7-006	5533	999-61690-001	LAGER 6900 ZZ		1
7-007	7301	999-61690-000	KULLAGER 6900		1
7-009	7303	300-37300-20	VÄXELHUS		1
7-010	0153	991-01050-041	MUTTER 5		1
7-011	1311	990-51050-103	INSEXSKRUV 5 X 10		1
7-012	7304	990-14080-104	PLUGG 8X10		1
7-013	7305	999-61626-000	KULLAGER 626		1
7-015	7307	304-37300-20	AXEL		1
7-016	7308	999-61600-104	LAGER 6001 DD		1
7-017	3657	993-51028-002	LÅSRING C 28 IN		1
7-018	7309	310-37300-21	LÅSBRICKA ÖVRE		1
7-019	7310	311-37300-20	LÅSBRICKA UNDRE		1
7-022	7311	312-37300-11	BULT MED BRICKA		1
7-023	7312	324-37300-20	DISTANS		1
7-035	7431	371-37300-01	DREVSATS		1
31-01	50136 5532	300-37307-90	VINKELVÄXEL	SEN.UTF.	1
31-02	1289	990-51050-253	INSEXSKRUV 5 X 25		1
31-03	0253	992-10050-012	FJÄDERBRICKA 5		1
31-04	7299	993-53022-002	LÅSRING R 22 INV.		1
31-05	2866	993-50010-002	LÅSRING C 10 UTV.		1
31-06	5533	999-61690-001	LAGER 6900 ZZ		1
31-07	7301	999-61690-000	KULLAGER 6900		1
31-09	5534	300-37307-20	VÄXELHUS		1
31-11	1311	990-51050-103	INSEXSKRUV 5 X 10		1
31-12	7304	990-14080-104	PLUGG 8X10		1
31-13	7305	999-61626-000	KULLAGER 626		1
31-15	7414	304-37307-20	AXEL		1
31-16	7308	999-61600-104	LAGER 6001 DD		1
31-17	3657	993-51028-002	LÅSRING C 28 IN		1
31-18	7415	310-37623-20	KLINGBRICKA ÖVRE		1
31-19	7310	311-37300-20	LÅSBRICKA UNDRE		1
31-22	7311	312-37623-20	BULT M BLICKA		1
31-23	1976	324-37350-20	DISTANS		1
31-35	7431	301-37300-01	DREVSATS		1


ANMÄRKNINGAR

AST 7000 7:2-93

FIGUR 8 VERKTYG OCH TILLBEHÖR

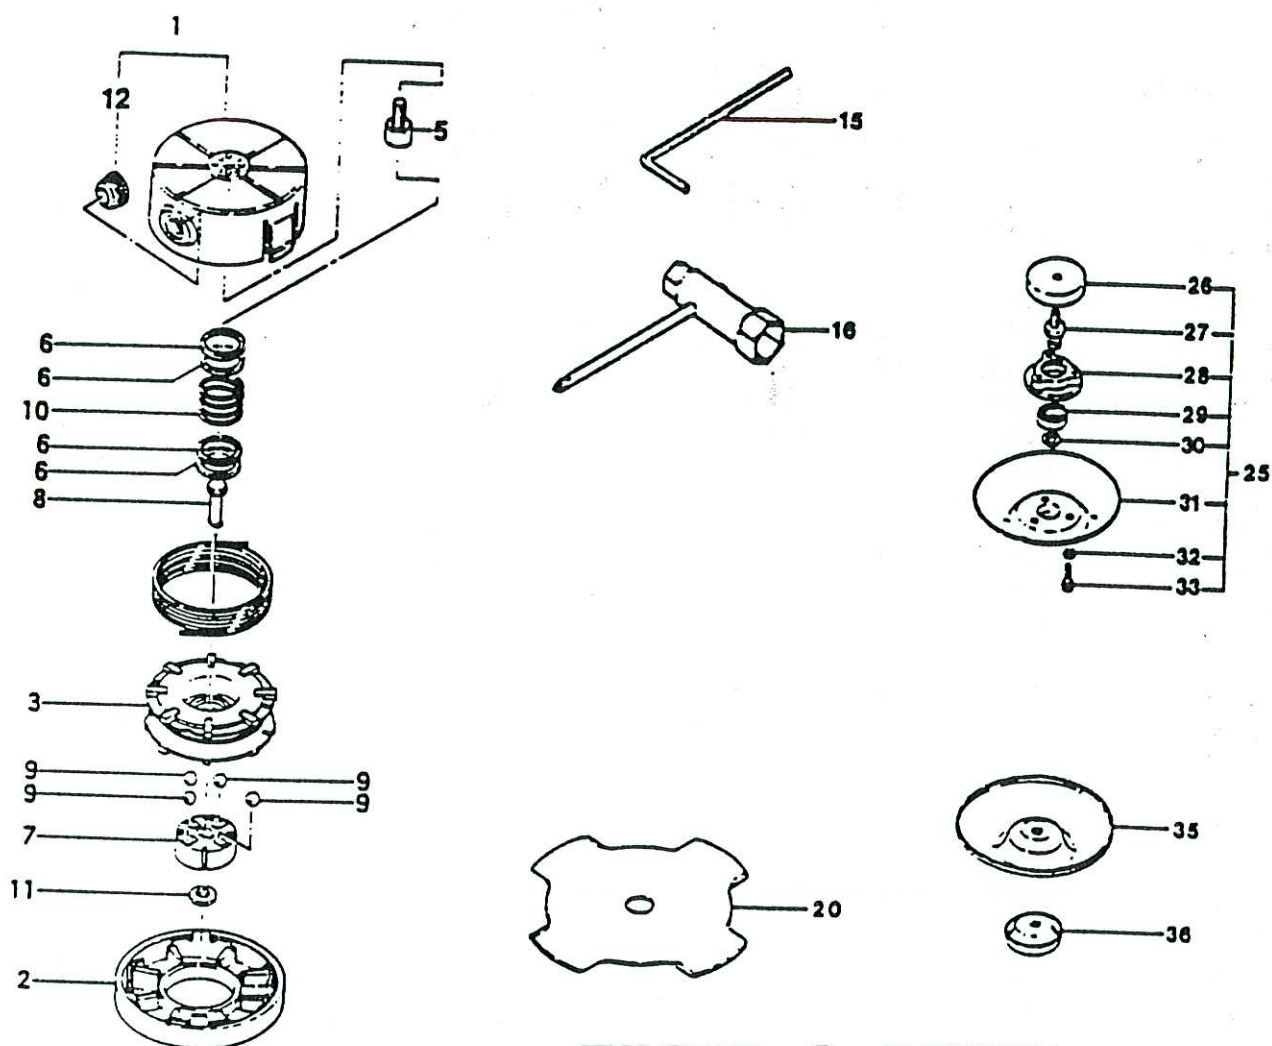

FIGUR 9 SKYDD

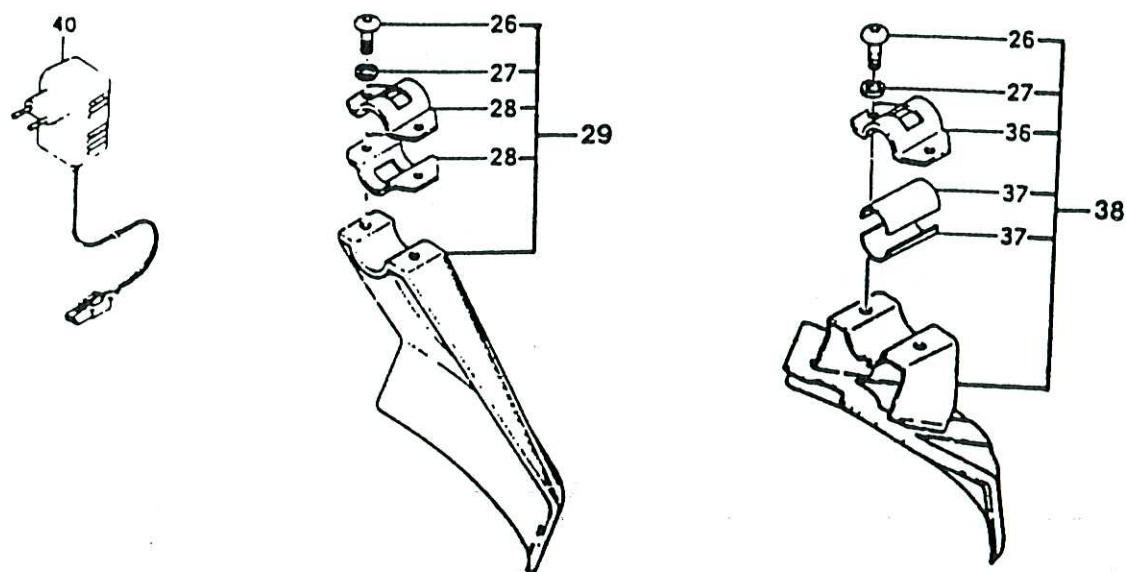

FIGUR 8 VERKTYG OCGH TILLBEHÖR

POS.	ARTIKELNR	TILLVERKN.NR.	BENÄMNING	MOTORNR	ANT.
8-000	50137 3502	783-33910-90	AUTOHUVUD TH 95 M		1
8-001	50136 9970	786-33004-90	ÖVERDEL 95 S,M,X,		1
8-002	9941	789-33004-21	UNDERDEL 95 SMX		1
8-003	9955	787-33670-21	TRÅDRULLE		1
8-005	9944	314-33670-20	ADAPTOR HANE L/H		1
8-006	9945	792-33004-20	BRICKA		4
8-007	9946	790-33004-20	TRYCKCENTRUM		1
8-008	9947	791-33004-20	CENTRUMBULT		1
8-009	9948	673-35600-20	STÅLKULA		4
8-010	9950	793-33910-20	FJÄDER SILVER		1
8-011	3007	358-02103-20	KOPPL.BRICKA A		1
8-012	9977	788-33071-20	TRÅDHYLSA		2
8-015	2379	813-20000-20	INSEXNYCKEL 4		1
8-016	3650	829-20000-80	NYCKEL		1
8-020	50137 4413		SLYKLINGA 4 TAND 9"		
8-020	50137 4412		SLYKLINGA 3 TAND 10"		
8-025	50137 4701	601-33411-90	MARKSTÖD MED LAGER		
8-026	50136 1909	603-33411-20	KÅPA		1
8-027	1908	604-37307-20	CENTRUMBULT		1
8-028	1910	602-33411-20	LAGERHUS		1
8-029	7360	999-61600-204	KULLAGER 6002 DD		1
8-030	4196	993-50015-002	LÅSRING C 15 EX		1
8-031	1911	601-33411-20	TALLRIK		1
8-032	0254	992-10060-062	FJÄDERBRICKA 6		3
8-033	0103	990-21060-151	BULT 6 X 15		3
8-035	50137 4700		MARKSTÖD UTAN LAGER		
8-036	50136 3589	316-33410-20	BULTSKYDD		
8-040	7313	663-37605-91	BATTERI-LADDARE 220		1
9-029	50137 4605		PLÅTSKYDD KOMPL.		1
9-026	50136 1917	990-53060-153	*INSEXSBULT 6 X 15		2
9-027	0254	992-10060-062	*FJÄDERBRICKA 6		2
9-028	3495	442-33905-20	*KONSOL		2
9-038	50137 4602		PLÅTSKYDD KOMPL.		V
9-036	50136 1906	442-33671-20	*KONSOL		1
9-037	7325	444-37609-20	*DISTANS		2

ANMÄRKNINGAR

* INGÅR I KOMPLETT SKYDD

AST 7000 8:2-93

