








B26  
04

## AST-5000 ENGINE-2

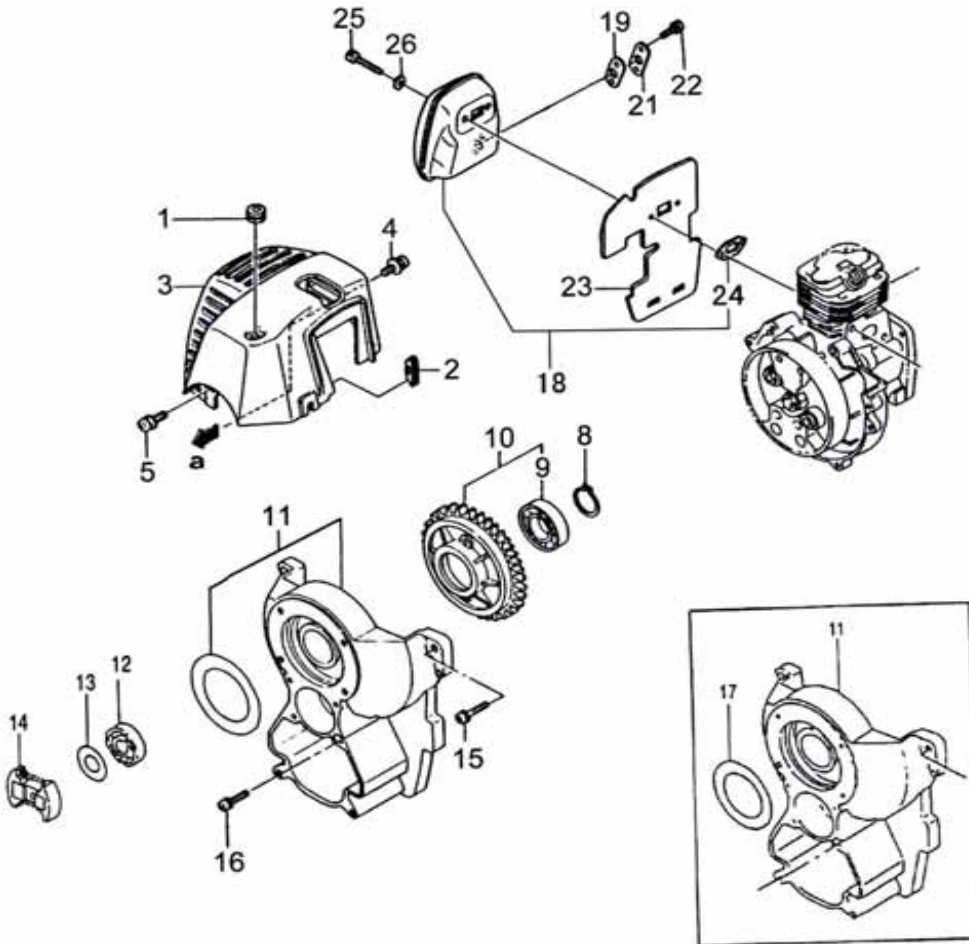


### Parts List

Ref.	PartsNo.	Description	Q'ty	Serial No.
001	202-01003-20	SECONDARY CORD GROMMET	1	
002	203-0631A-20	GROMMET	1	
003	738-0631A-20	MUFFLER PROTECTOR	1	
004	994-15040-222	SCREW 4X22/PS	2	
005	994-15040-122	SCREW 4X12/PS	2 - H251660	
005	990-72045-164	TAPPING SCREW 4.5X16	2	H251661 -
008	993-50017-002	STOP RING C-17, OUTER	1	
009	999-61600-301	BALL BERING 6003ZZ, 35MM/OD	1	
010	774-0634F-80	STARTER PULLEY COMP.	1	
011	112-0634F-20	FAN CASE	1 - H251660	
011	112-0634F-82	FAN CASE COMP. VERMILION	1	H251661 -
012	999-61600-001	BALL BEARING #6000ZZ, 26MM/OD	1	
013	173-35500-20	PROPELLER SHAFT SHIM A 0.20	V	
013	174-35500-20	PROPELLER SHAFT SHIM A 0.30	V	
013	175-35500-20	PROPELLER SHAFT SHIM A 1.0	V	
014	277-0635M-80	CLUTCH COMP, 48MM	1	
015	994-14050-202	SCREW 5X20/S	1 - H251660	
015	994-16050-202	SCREW 5X20/WS	1	H251661 -
016	994-14050-402	SCREW 5X40/S	3 - H251660	
016	994-16050-422	SCREW 5X42/WS	3	H251661 -
017	220-06460-20	SHIELD	1	L124001 -
017	220-06460-20	SHIELD	1 -	L299391
018	704-0099F-90	MUFFLER SET, SPARE	1	
019	751-04200-20	MUFFLER SPECIAL GASKET	1	
021	734-0631A-20	EXHAUST PIPE	1	
022	994-14040-081	SCREW 4X8/S	2	
023	133-0631A-20	HEAT SHIELD	1	
024	737-06100-21	MUFFLER GASKET	1	
025	990-51050-503	HEX. HOLE BOLT 5X50	2	
026	992-01050-011	WASHER 5	2	

B26  
05-1

# AST-5000 CARBURETOR

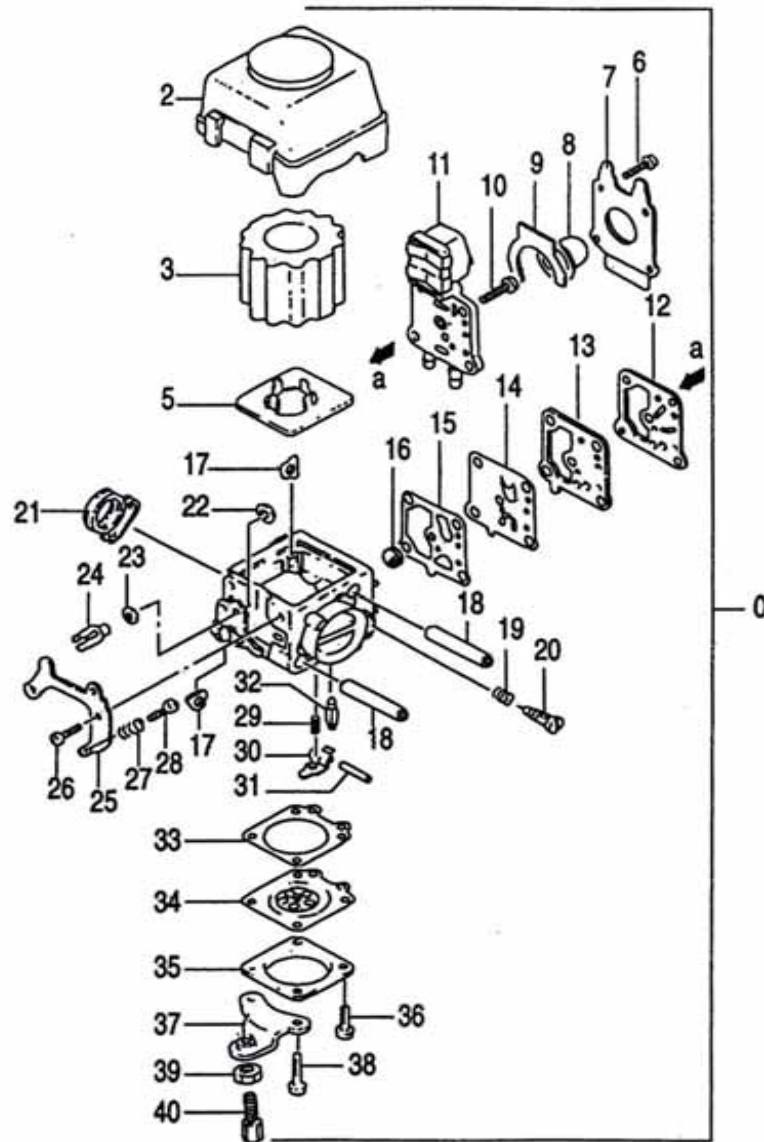

## Parts List

Ref.	PartsNo.	Description	Q'ty	Serial No.
000	455-25138-90	CARBURETOR ASS'Y, WZ-46	1	
002	424-0631P-20	CLEANER CAP	1	
003	421-0631P-20	CLEANER ELEMENT	1	
005	425-0631P-20	CLEANER BASE	1	
006	548-25108-20	SET SCREW	4	
007	452-25108-20	PRIMING PUMP COVER	1	
008	447-25108-20	PRIMING BODY	1	
009	635-25108-20	OVER FLOW GASKET	1	
010	548-25108-20	SET SCREW	1	
011	575-25108-80	PUMP BODY COMP.	1	
012	522-25108-20	PUMP PLATE GASKET	1	
013	523-25108-20	PUMP PLATE	1	
014	576-25108-20	PUMP DIAPHRAGM	1	
015	577-25108-20	PUMP DIAPHRAGM GASKET	1	
016	578-25007-20	INLET SCREEN	1	
017	636-25108-20	SLEEVE PLATE	2	
018	437-25108-20	SLEEVE	2	
019	485-25108-20	HIGH ADJUST SPRING	1	
020	460-25108-20	HIGH ADJUST SCREW	1	
021	449-0631P-20	CARBURETOR GASKET	1	
022	489-25100-20	STOP RING	1	
023	549-25100-20	THRUST WASHER	1	
024	539-25101-20	SWIVEL	1	
025	544-25108-20	ADJUSTER STAY	1	
026	514-25108-20	SET SCREW	2	
027	463-25100-20	IDLE ADJUST SPRING	1	
028	462-25100-20	IDLE ADJUST SCREW	1	
029	477-25013-20	VALVE SPRING	1	
030	473-25001-20	VALVE HINGE	1	
031	605-25001-20	HINGE PIN	1	
032	603-25012-20	NEEDLE VALVE	1	
033	475-25001-20	DIAPHRAGM GASKET	1	
034	474-25001-80	METERING DIAPHRAGM COMP.	1	
035	476-25004-20	DIAPHRAGM COVER	1	
		SEE NEXT PAGE		












B26  
8-1

# AST-5000 OPERATION PIPE

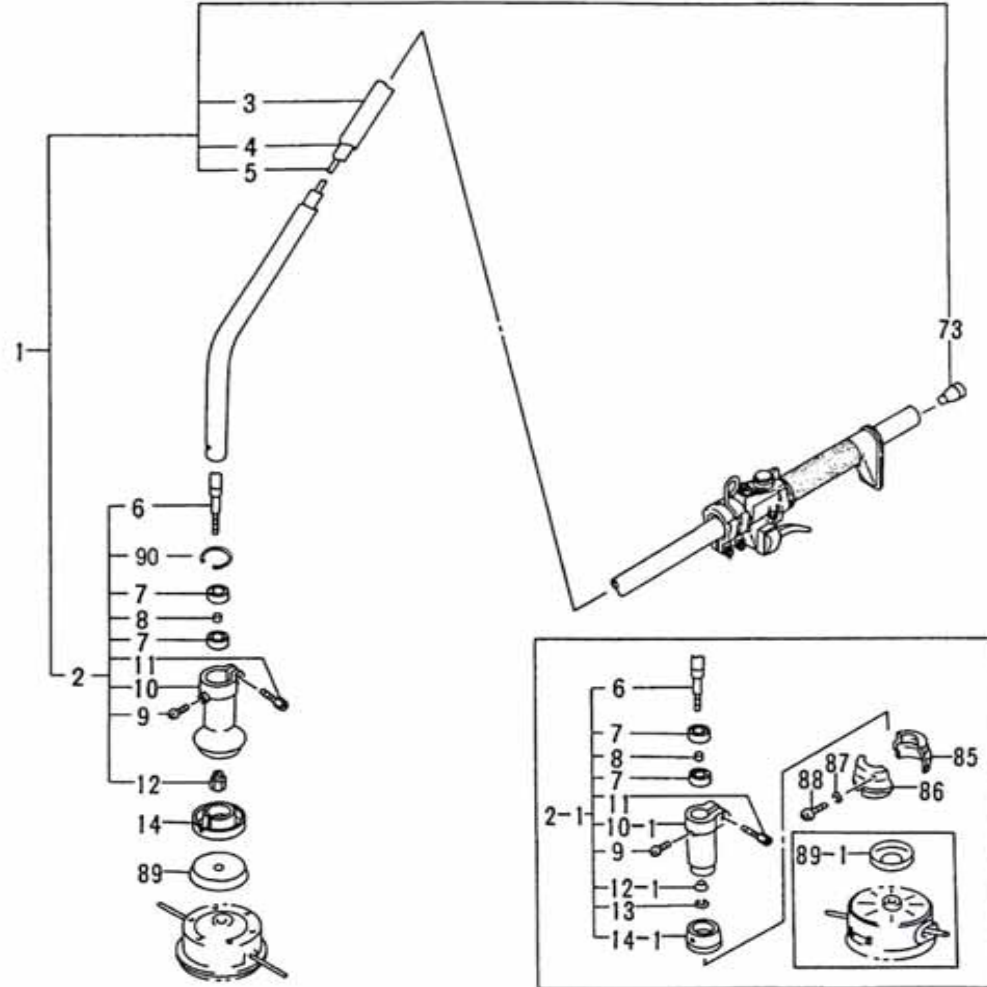

## Parts List

Ref.	Part No.	Description	Q'ty	Serial No.
001	341-37651-91	DRIVE SHAFT PIPE ASSY	1	- H213970
001	341-37651-92	DRIVE SHAFT PIPE ASSY	1	- J148780
001	341-37651-94	DRIVE SHAFT PIPE ASSY	1	- L299390
001	341-37718-92	DRIVE SHAFT PIPE ASS'Y	1	L299391 -
002,1	300-37651-91	GEAR CASE ASSY	1	- L299390
002	300-37710-91	CUTTER CASE ASS'Y	1	L299391 -
003	341-37651-21	DRIVE SHAFT PIPE	1	- K270520
003	341-37651-22	DRIVE SHAFT PIPE	1	- L299390
003	341-37715-20	DRIVE SHAFT PIPE	1	L299391 -
004	350-37651-21	FLEXIBLE LINER	1	
005	344-37651-21	FLEXIBLE SHAFT	1	Q006651 -
006	304-37651-21	CUTTER SHAFT	1	
007	999-61608-004	BALL BEARING 608DD, 22MM/OD	2	
008	348-37651-20	COLLAR	1	
009	990-11050-101	SCREW 5X10	1	- L299390
009	990-11050-081	SCREW 5X8	1	L299391 -
010,1	300-37651-20	GEAR CASE	1	- L299390
010	300-37710-21	CUTTER CASE	1	L299391 -
011	994-25050-301	BOLT 5X30 PS W/PLUS	1	
012,1	760-37651-20	SPECIAL WASHER	1	- L299390
012	315-37710-20	SPECIAL NUT	1	L299391 -
013	992-10080-012	S.WASHER 8	1	- L299390
014,1	310-37651-20	CUTTER HOLDER	1	- L299390
014	310-37710-20	CUTTER HOLDER	1	L299391 -
073	320-37651-20	SPACER	1	J148781 -
085	306-37651-20	WINDING PROTECTOR COVER C	1	J148781 -
085	306-37651-20	WINDING PROTECTOR COVER C	1	- L299390
086	308-37651-20	WINDING PROTECTOR COVER B	1	J148781 -
086	308-37651-20	WINDING PROTECTOR COVER B	1	- L299390
087	992-10050-062	S.WASHER 5	2	J148781 -
087	992-10050-062	S.WASHER 5	2	- L299390
088	990-51050-203	HEX. HOLE BOLT 5X20	2	J148781 -
088	990-51050-203	HEX. HOLE BOLT 5X20	2	- L299390
089,1	307-37651-20	WINDING PROTECTOR COVER	1	J148781 -
		SEE NEXT PAGE		







